



SmartSetup HAUSB USB dongle Zigbee Setup user manual


Go to Settings > Apps

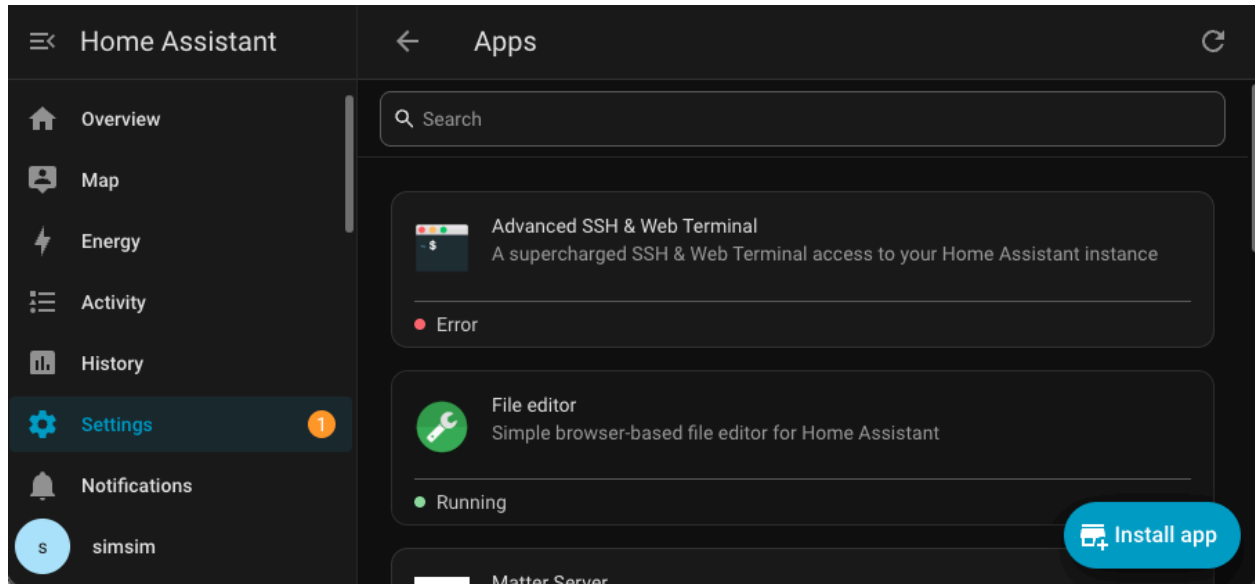


Add <https://github.com/zigpy/addons.git> to the Repositories

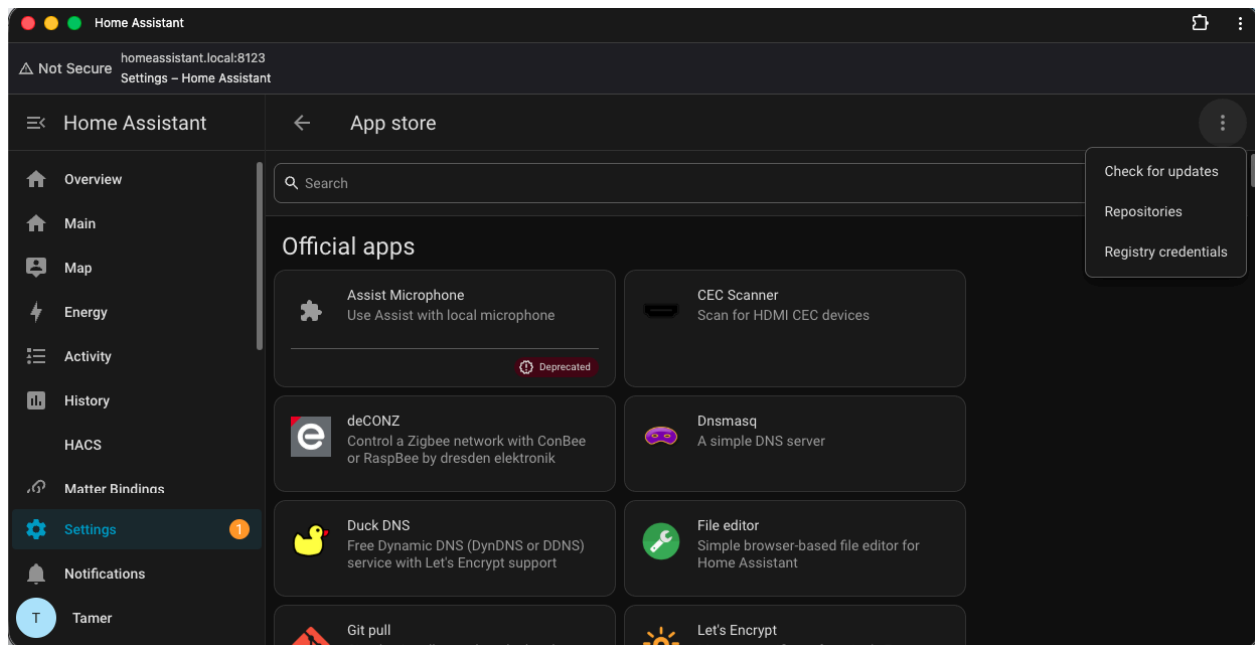


Select Repositories and add <https://github.com/zigpy/addons.git>

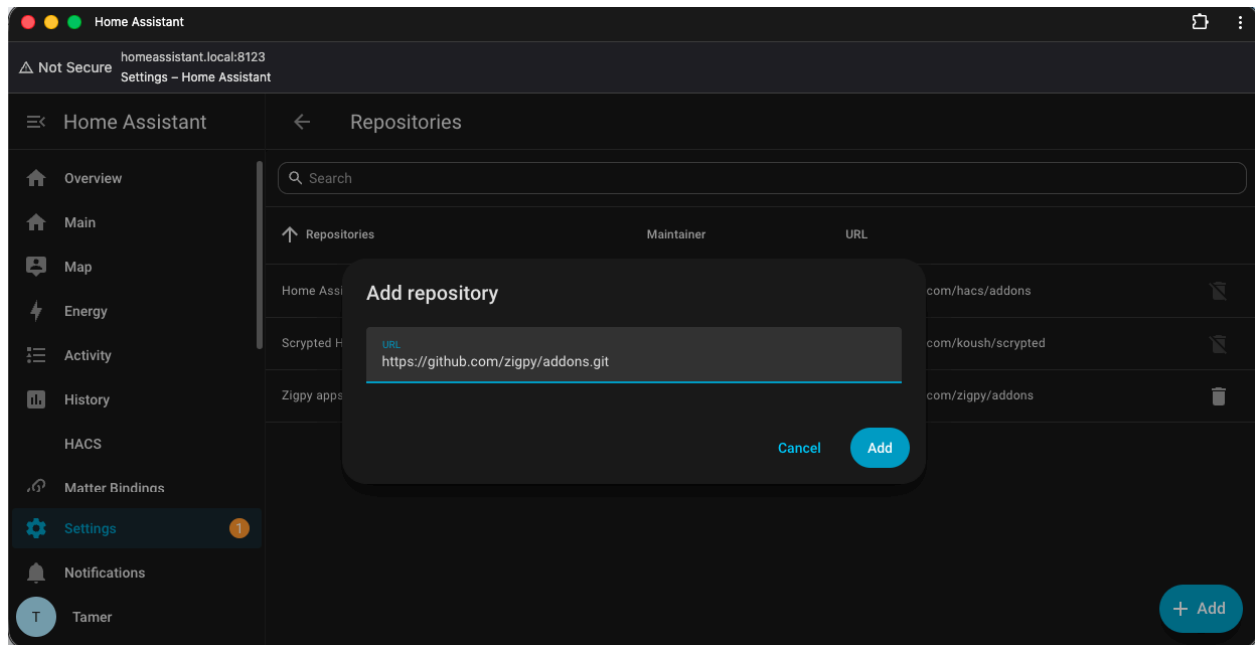


Go back to App install and search for “Ziggurat”

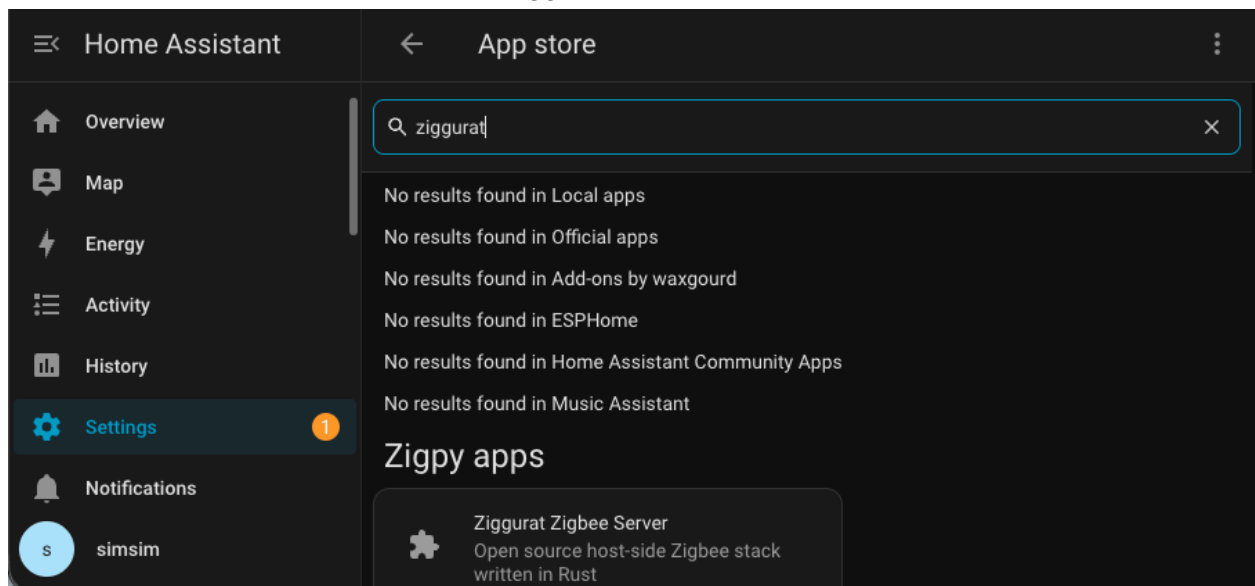


Press Install

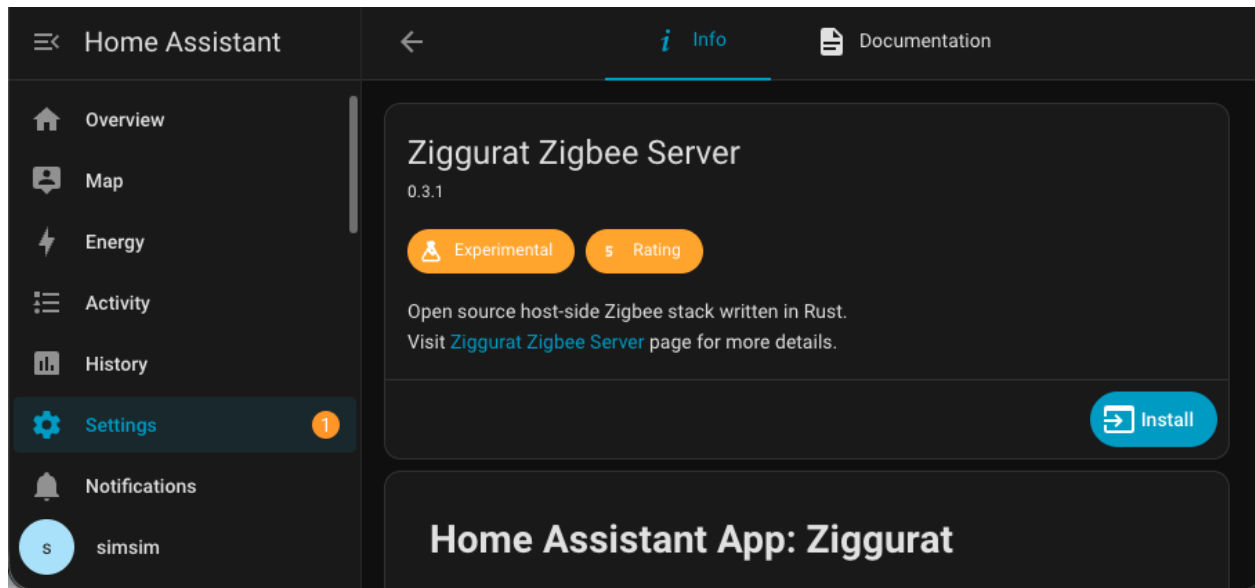


Before pressing start go to the Configure tab first

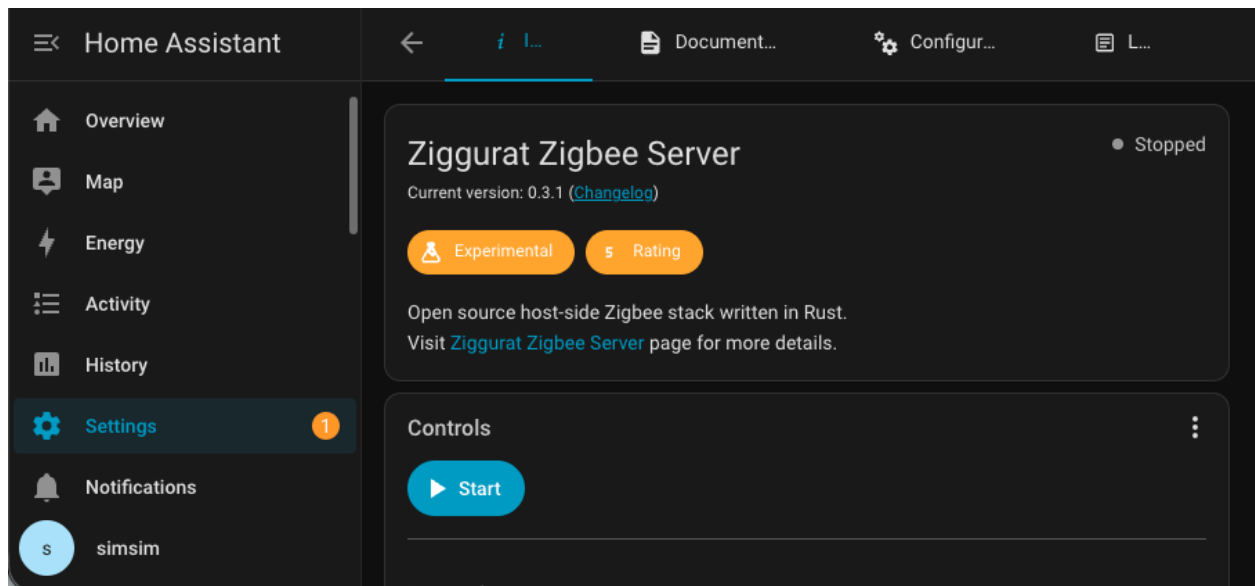


Select the usb dongle (make sure it is inserted in your Home Assistant HUB)

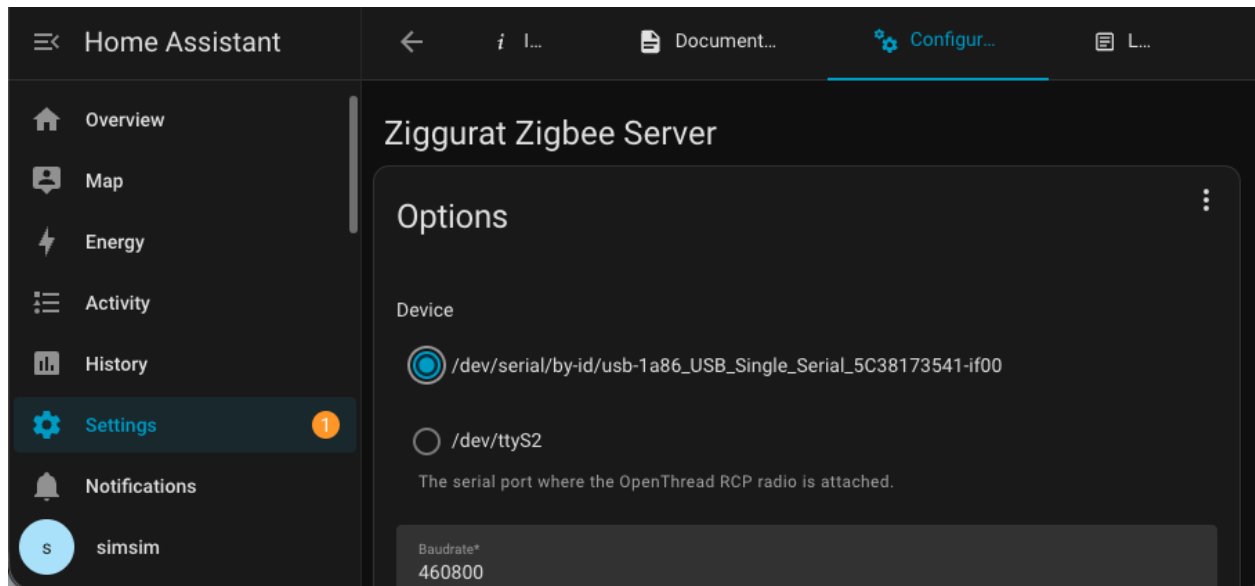



Select the options below

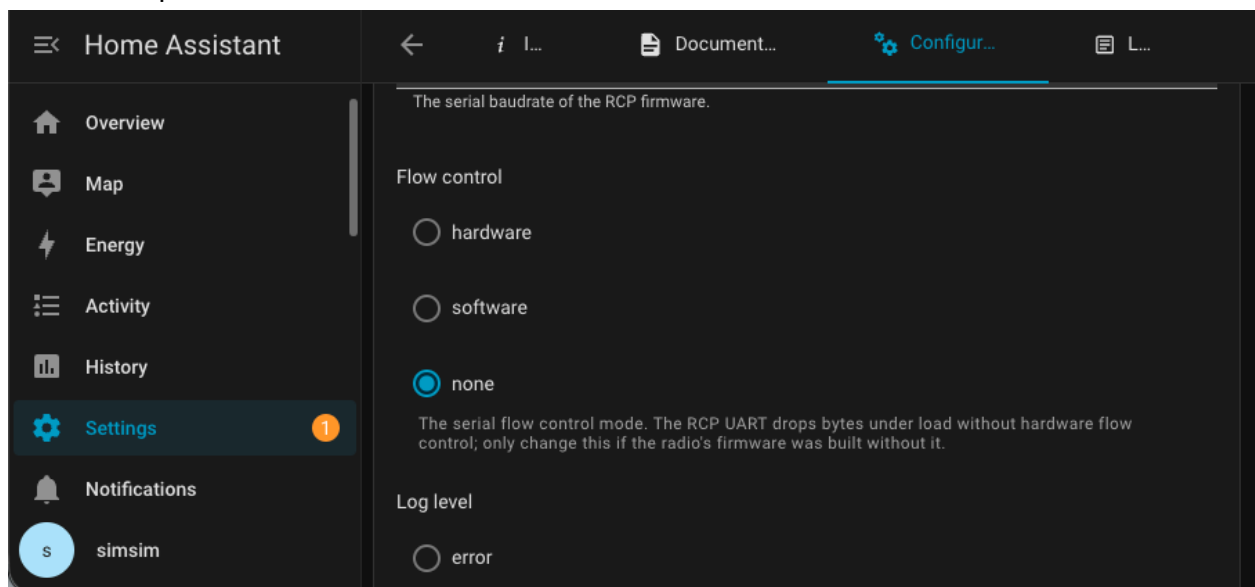

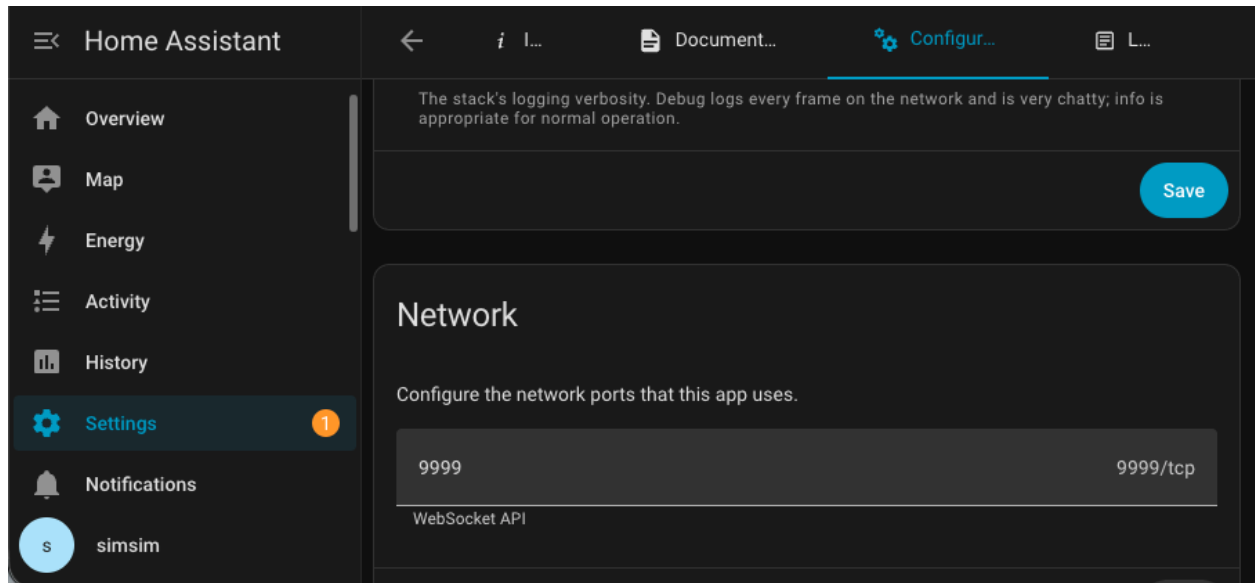


Press “Save” then go back to the first tab and press “Start”

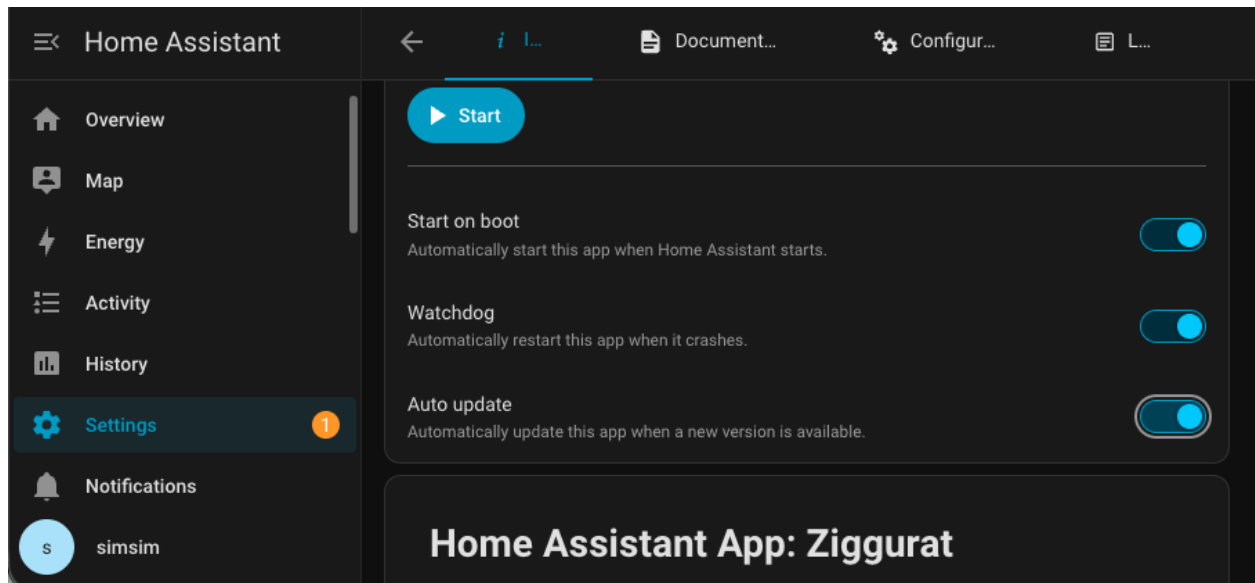


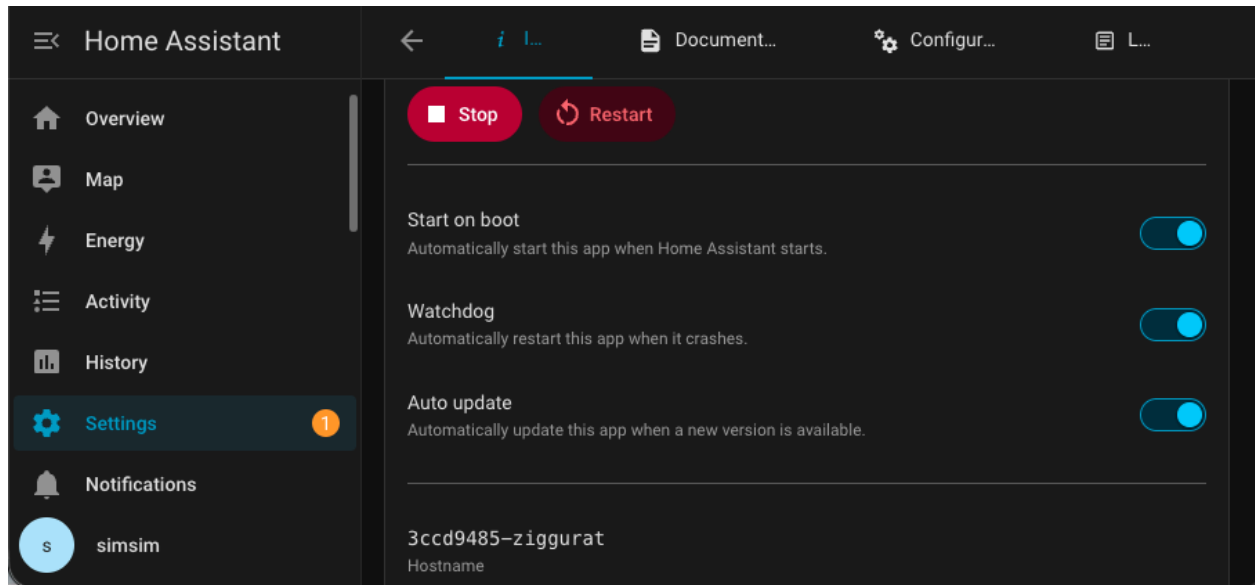


Go back to Settings > Devices & services

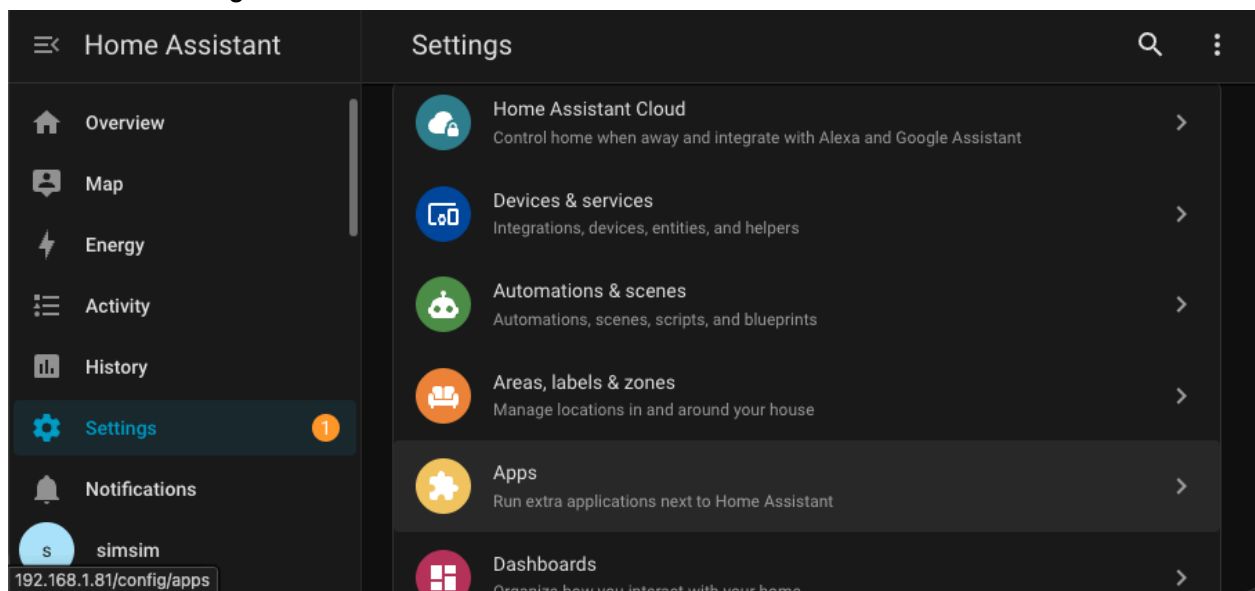


Press “Add integration”

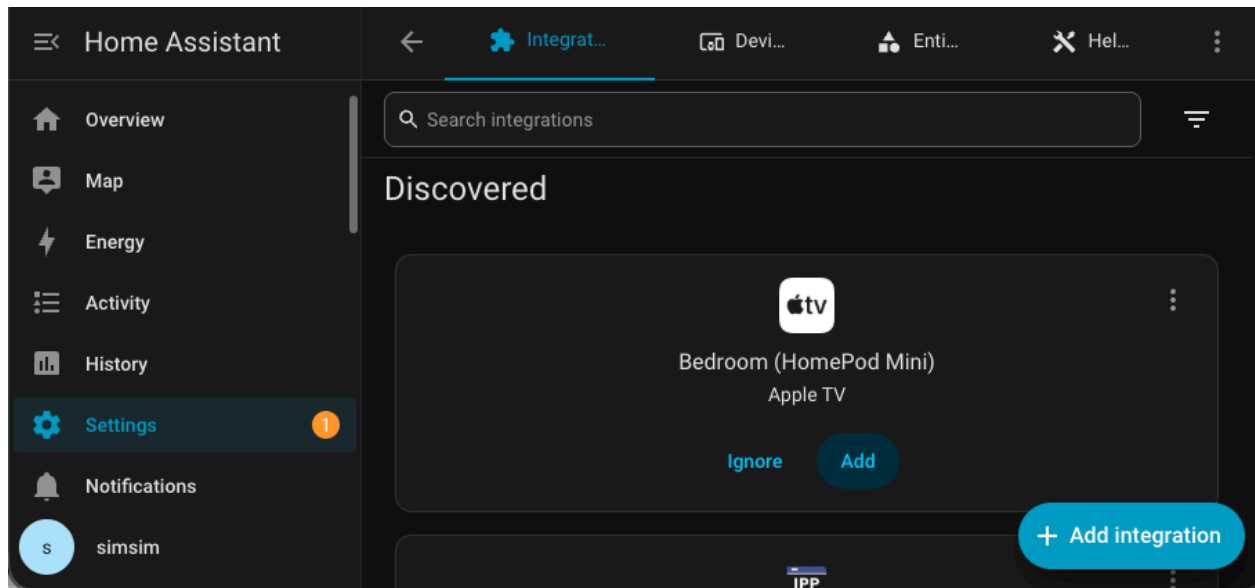


Select “Zigbee Home Automation”

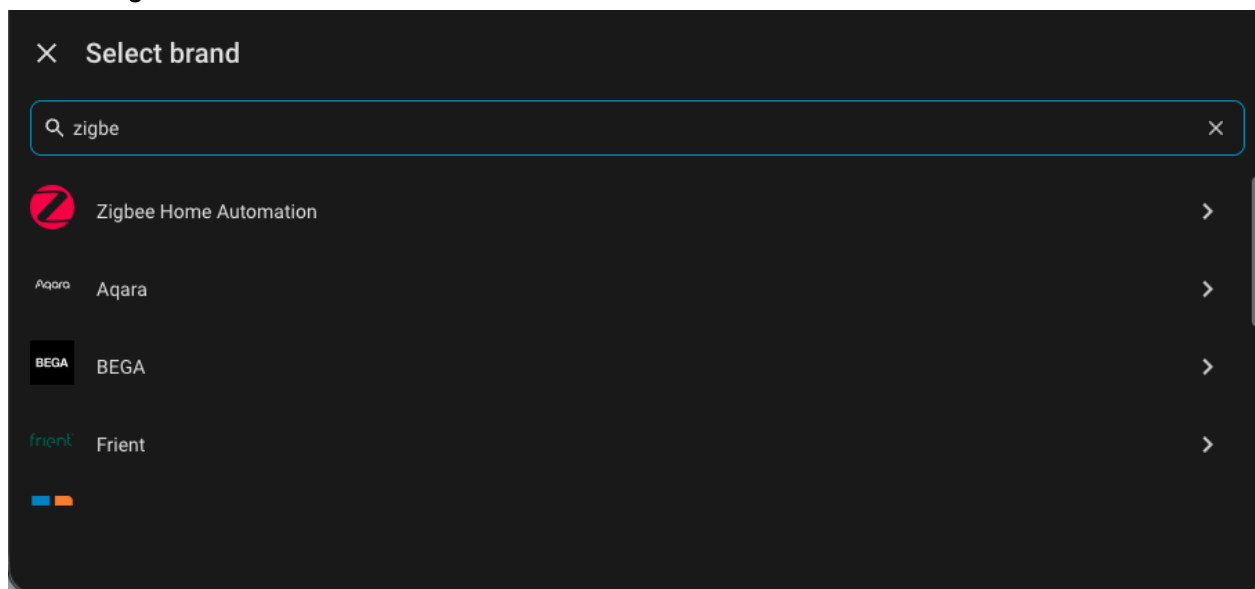

Select “Zigbee Home Automation”

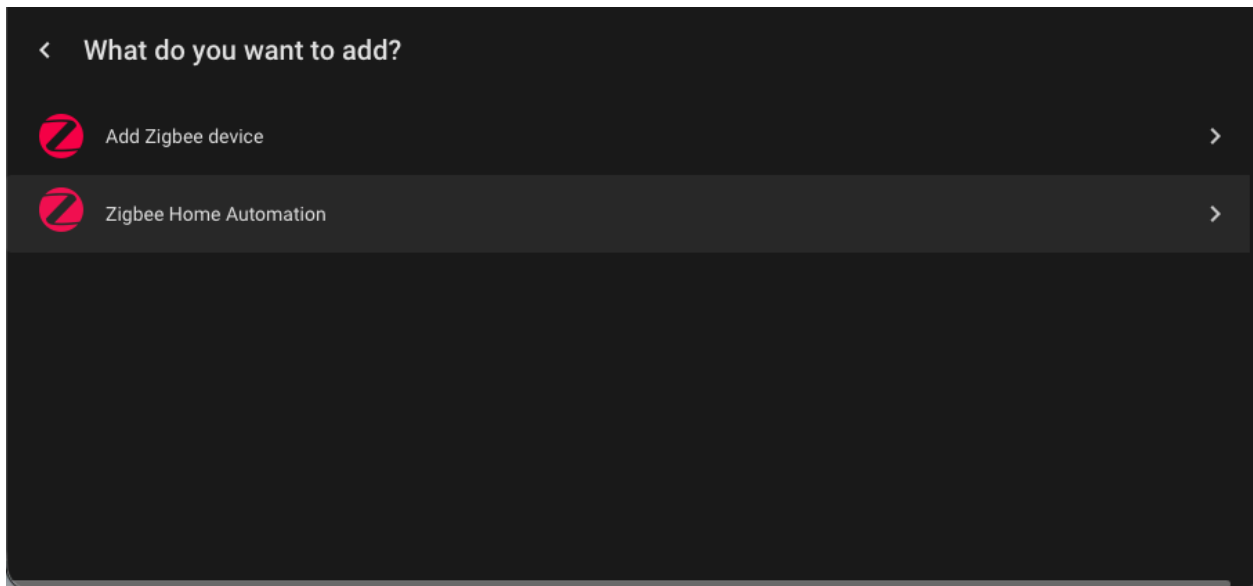

Select “Enter Manually”

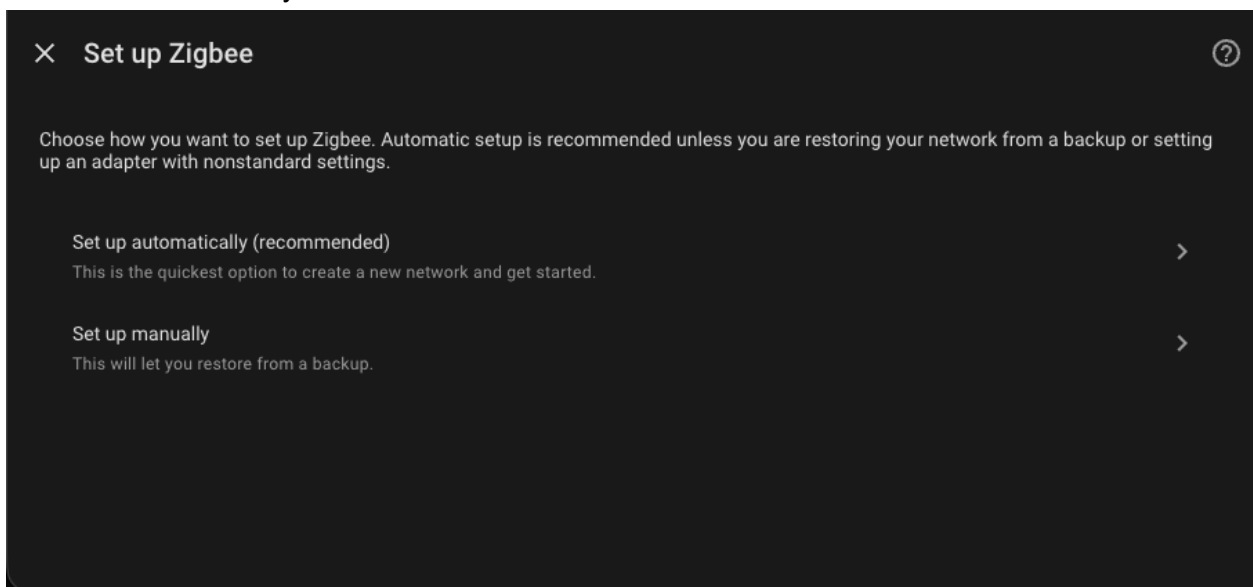

Type “ws://0.0.0.0:9999” for the Zigbee adapter port

×

Select a serial port

?

Select the serial port for your Zigbee adapter

Serial device path*

ws://0.0.0.0:9999|

×

Submit

Select Ziggurat

Select an adapter type

Pick your Zigbee adapter type

Adapter type *

EZSP = Silicon Labs EmberZNet protocol: Elelabs, HUSBZB-1, Telegesis

EZSP = Silicon Labs EmberZNet protocol: Elelabs, HUSBZB-1, Telegesis

ZNP = Texas Instruments Z-Stack ZNP protocol: CC253x, CC26x2, CC13x2

deCONZ = dresden elektronik deCONZ protocol: ConBee I/II, RaspBee I/II

Zigurat = Open source host-side Zigbee stack in Rust

ZiGate = ZiGate Zigbee radios: PiZiGate, ZiGate USB-TTL, ZiGate WiFi

XBee = Silicon Labs XBee radios: XBee-USB, XBee-Mod, XBee-RTW, XBee-DS, XBee-PRO, XBee-433, XBee-802.15.4

Set settings as below of 460800 baud and none flow control

Serial port settings

460800

Baudrate to use when communicating with the serial port, usually 115200 or 460800

Serial port flow control

☐ hardware

☐ software

☒ none

Check your adapter's documentation for the correct option, usually `None` or `Hardware`

Submit

In the next screen select “Set up automatically”

Ignore Add

Ignore Add

Ignore

Set up Zigbee

Choose how you want to set up Zigbee. Automatic setup is recommended unless you are restoring your network from a backup or setting up an adapter with nonstandard settings.

Set up automatically (recommended)

This is the quickest option to create a new network and get started.

Set up manually

This will let you restore from a backup.

1 device

1 service

1 entry

1 entity

Google Tr speech

Shopping



Loading next step for Zigbee Home Automation



× Success



Created configuration for .

Finish

After setup you can Add a Zigbee device by pressing “Add device” under the Zigbee integration using ZHA “Zigbee Home Automation”

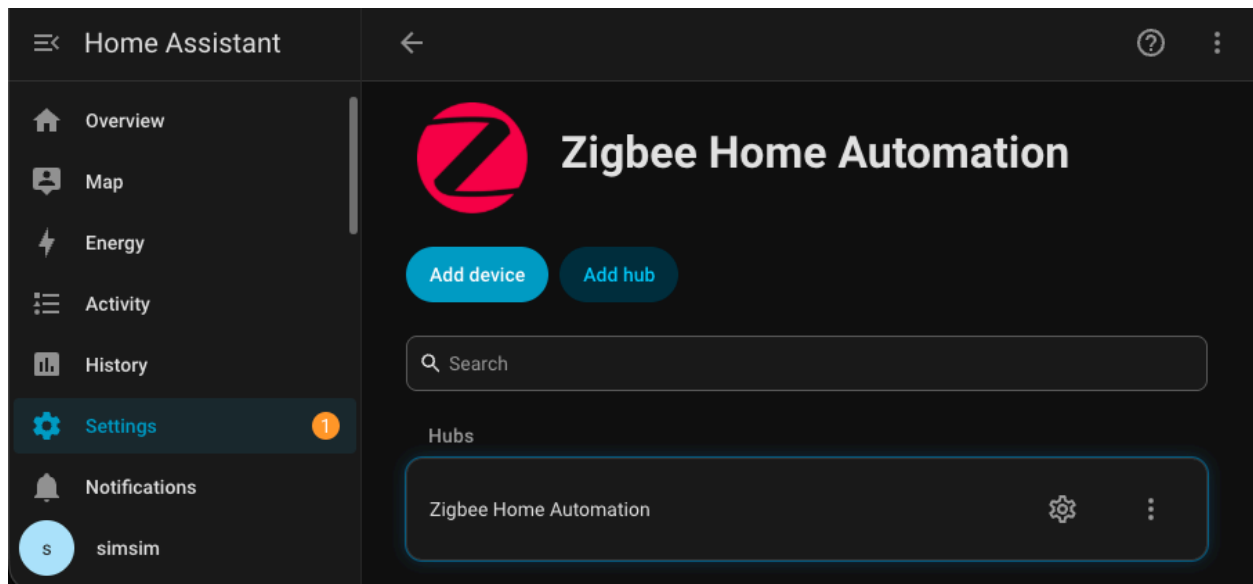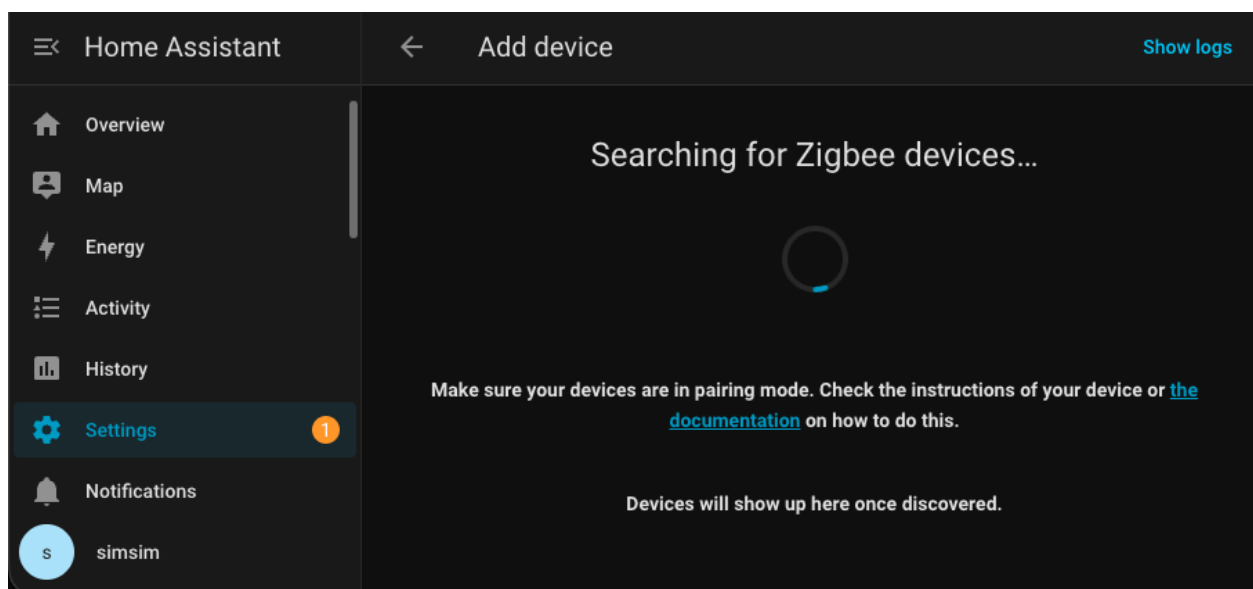

Put your Zigbee accessory in pairing mode and it should show as below

