


BLIND BEAD CHAIN MOTOR INSTRUCTION

CHAIN MOTOR BUILT-IN ELECTRONIC RECEIVER

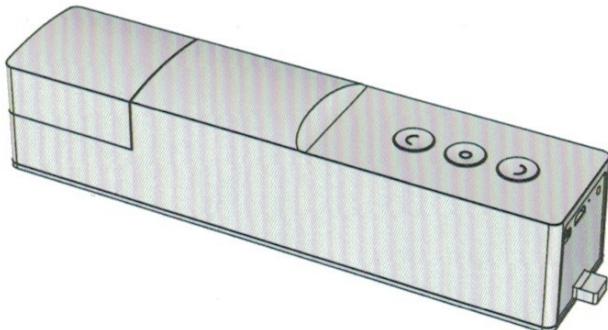

- Speaker icon: Super silent design
- Off icon: Power off and position memory function
- Wi-Fi icon: Wireless control: RF remote, ZigBee, Bluetooth
- Battery icon: Built-in lithium battery
- House icon: Smart home connection
- Location icon: Percentage control position
- Target icon: Inching / continuation move mode


Technical parameters

| Product model | Input voltage | Power | RPM | Torque | Rated current | Battery capacity |
|---------------|---------------|-------|-------|--------|---------------|------------------|
| ZM85EL-1x | DC 5V | 8W | 30rpm | 0.5Nm | 500mA | 7.4VDC/3000mAh |

⚠ LOW BATTERY: The motor will raise an alarm with a voice "Di" to warn low battery. Please charge the device then avoid over-discharge to damage motor or abnormal operation.

Full charge the device for 6 hours before first use.
Please charge the device for at least 6 hours every 3 months to prolong the battery life.


Recharging status: Red light always on when the USB cable plug in power and the motor.
Full recharged: When the USB cable plug in power and the motor, fully recharged, the red light goes off and the green light is on.

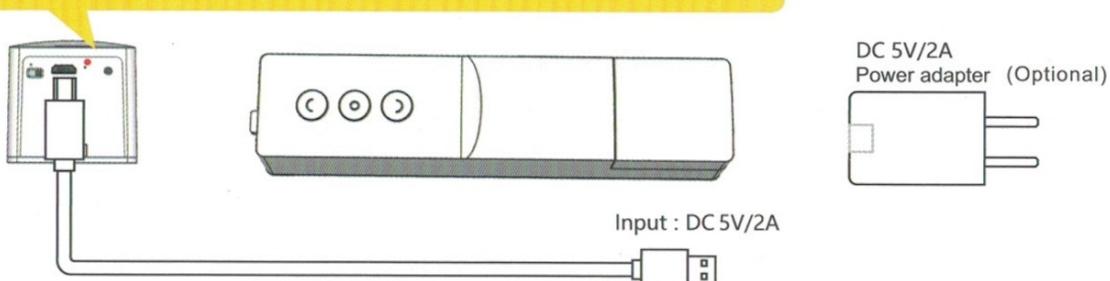

5V Solar charging board (Optional)



Button manual

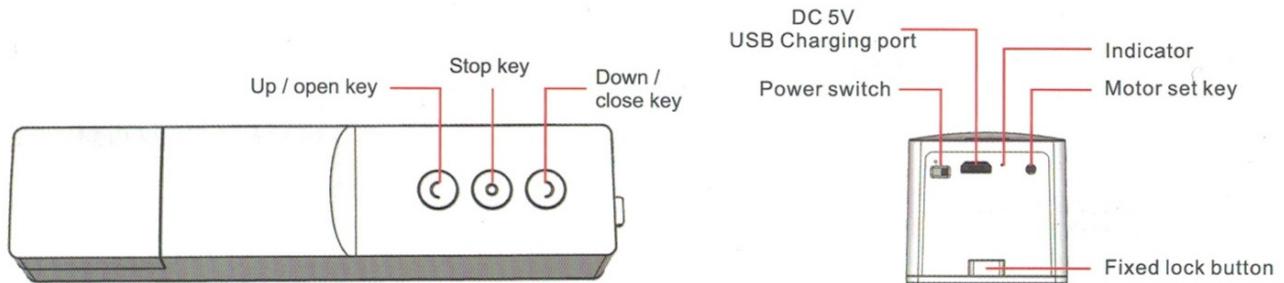

Bead wheels



Compatible cords & chains

| | | | |
|--|-------------|--|--------|
| | Beaded | | 2.0 mm |
| | Metal Chain | | 3.0 mm |
| | 4.5*6 mm | | 4.0 mm |
| | 4.5*12mm | | |
| | 3.2 mm | | |
| | 6 mm | | |

Remote Control Instruction

ZC168-9 Multi - channel remote

Channel number: Total 9 channels

Mode of operation: Keystroke

Coding mode: Rolling code

Emission frequency: 433.92MHz


Battery Type: 3.7 Polymer

Lithium Battery 50mAh

Charging voltage: USB 5V/1A


Down / close key

Channel -

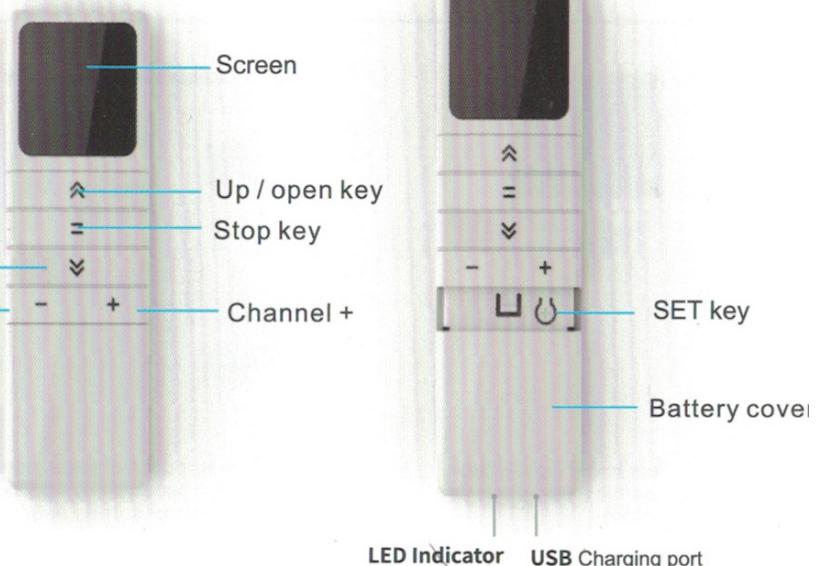


Remote Control Instruction


ZC175A-9 Multi channel remote

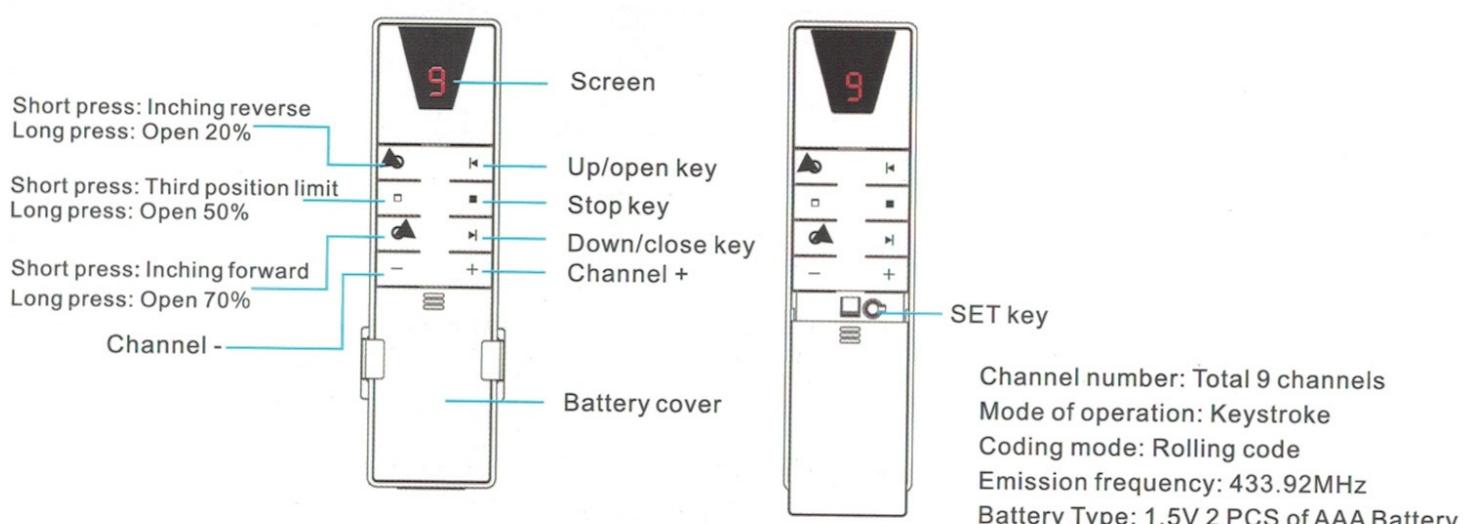

ZC175B-9 Multi - channel remote

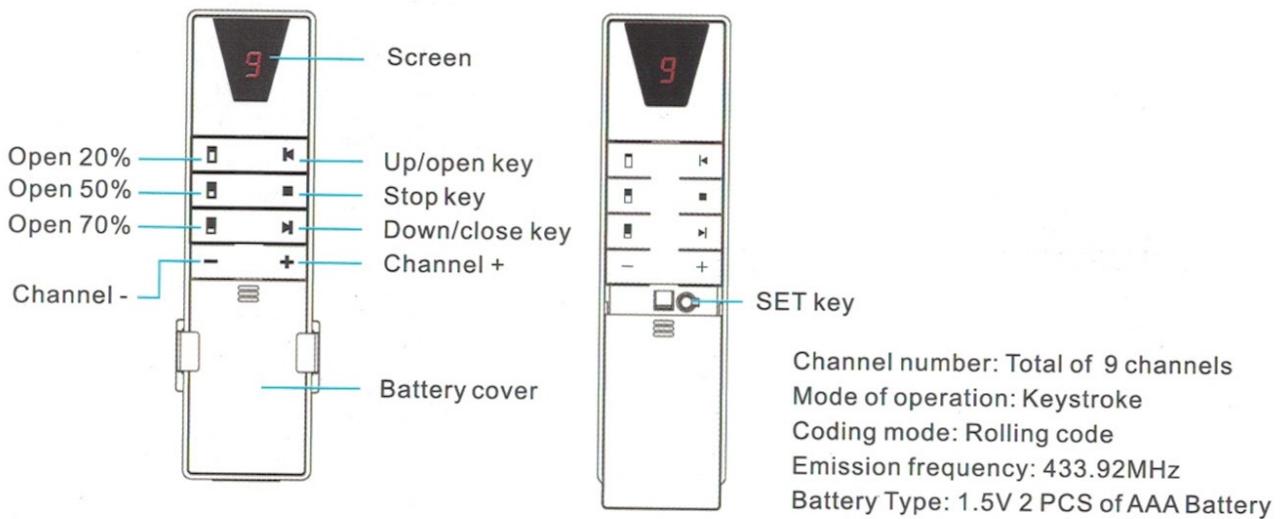


ZC176-1 Single channel remote

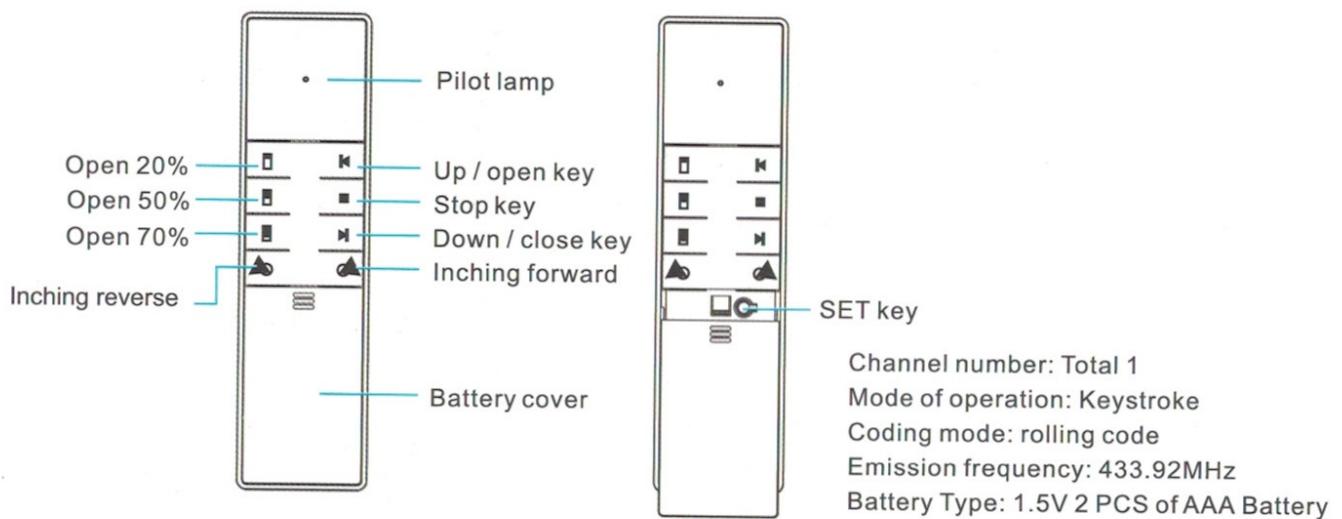

Installation steps

STEP 1

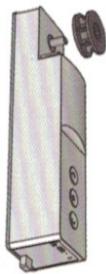


Choose the right bead wheel and install it on the motor shaft.

STEP 2



Put the chain bead on the bead wheel.


STEP 3

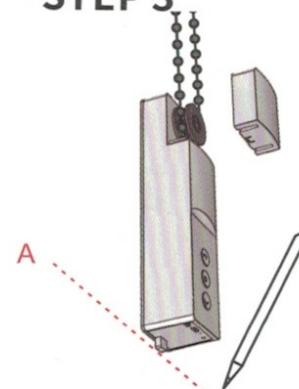

Marking line A


- Close the wheel cover.
- Attach the motor vertically to the fixed wall.
- And tighten the curtain bead chain.
- Draw a marking line A on the wall at the bottom of the motor.

STEP 4

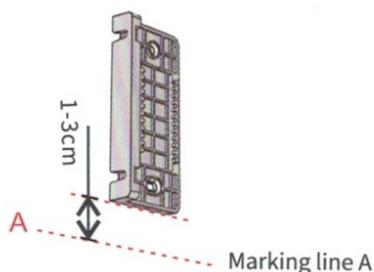


Install the fixed bracket at the position 1-3cm up from the marking line A.

STEP 5

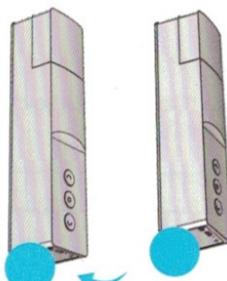


Press the lock button.

STEP 6

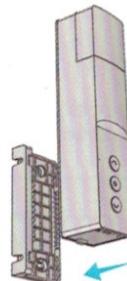


Install the chain motor on the fixed bracket.

STEP 7

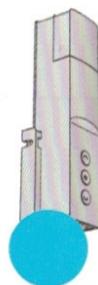


Move the chain motor to downward.

STEP 8

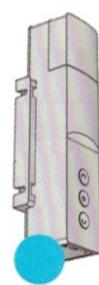

Move the chain motor up and down to adjust to tighten the bead chain.

STEP 9

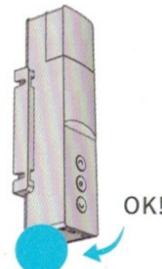

After adjustment, release the lock button, the button will automatically pop up as fixed.


Tips : If the bead chain trembles or noticeable rattling sound during operation, it may be that you have not adjusted the bead chain tight enough.

Remote control and network setting manual

⚠ These operations only work for the remote control within the effective control distance, and the motor is in the power-on state, otherwise it doesn't work.

Connection setting for motor and remote control

Please finish this process within 5 seconds, otherwise it will exit the setting due to overtime.

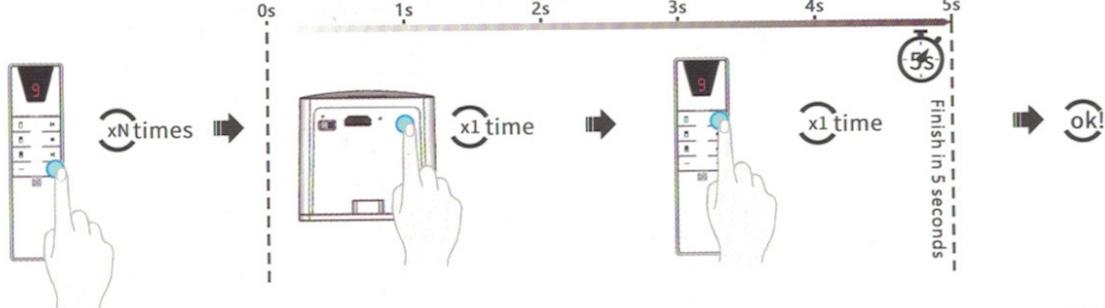

Choose one of the channels to connect with the motor by "+" or "-" key.


Press the "SET key" once, then motor with a "Di" sound.

Press the "Up / open key" once within 5 seconds.

Motor successfully set with a "Di" sound.

Setting limit


⚠ First, run the motor to the limit position you want to set and pause, and then perform the following operations. If the motor has travel limit already, you need to clear the original travel before resetting it.

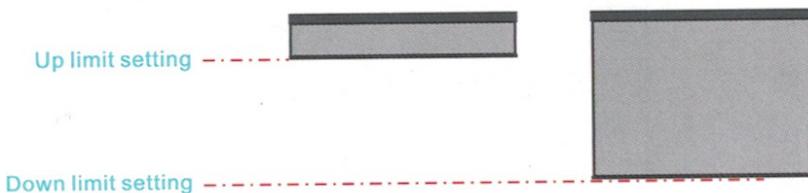

⚠ Up and down limits must be set first, in order to use the percentage control function.

Up limit setting

Please finish this process within 5 seconds, otherwise it will exit the setting due to overtime

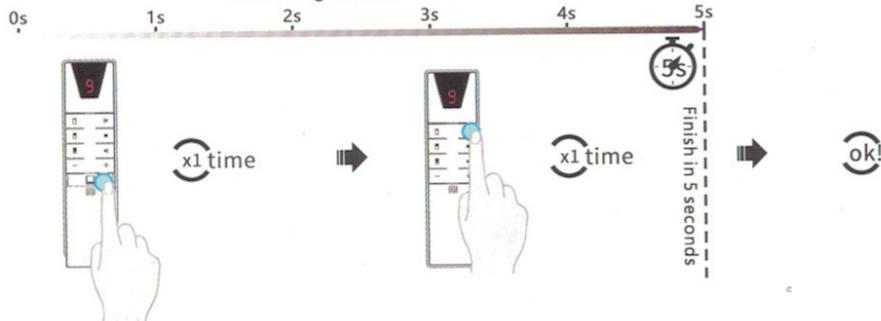


Press the remote control "Set key" once, the screen shows 1.

Press the "Up / open key" once within 3 seconds.

Motor successfully set with a "Di" sound.

Down limit setting

Please finish this process within 5 seconds, otherwise it will exit the setting due to overtime

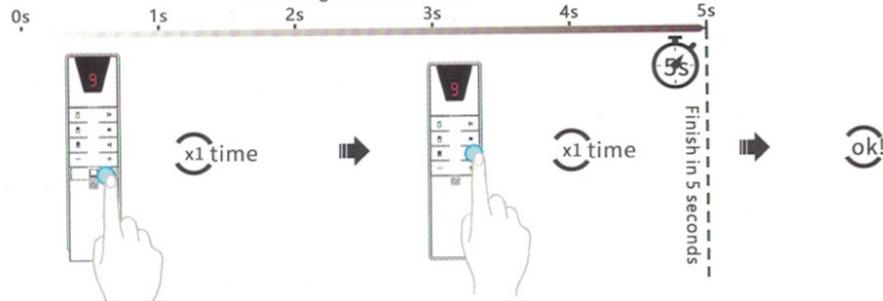

Press the remote control "Set key" once, the screen shows 1.


Press the "Down / close key" once within 3 seconds.

Motor successfully set with a "Di" sound.

Delete the remote control from the motor

⚠ These operations only work for the remote control within the effective control distance, and the motor is in the power-on state, otherwise it doesn't work.

Delete the remote current channel from the motor

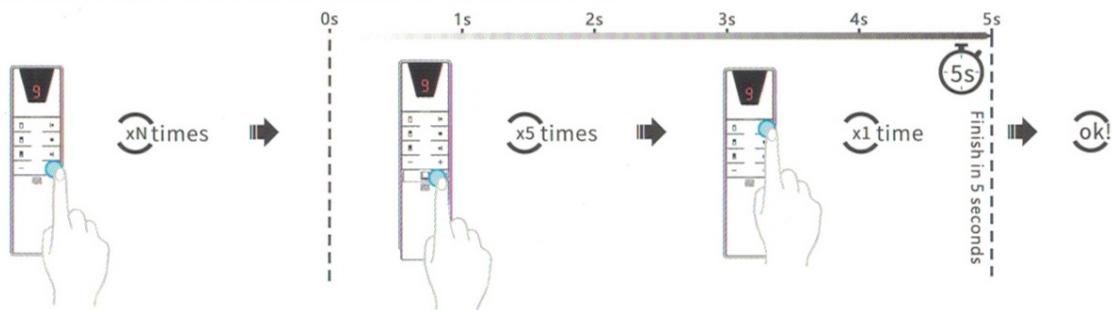

Choose the channel which is connected to the motor by the remote control "+" or "-" key.


Press the remote control "Set key" 5 times, the screen shows 5.

Press the "Up / open key" once within 3 seconds.

Motor is successfully set with a "Di" sound.

Delete current remote from the motor

⚠ To cancel the connection between the motor and current remote all channels.

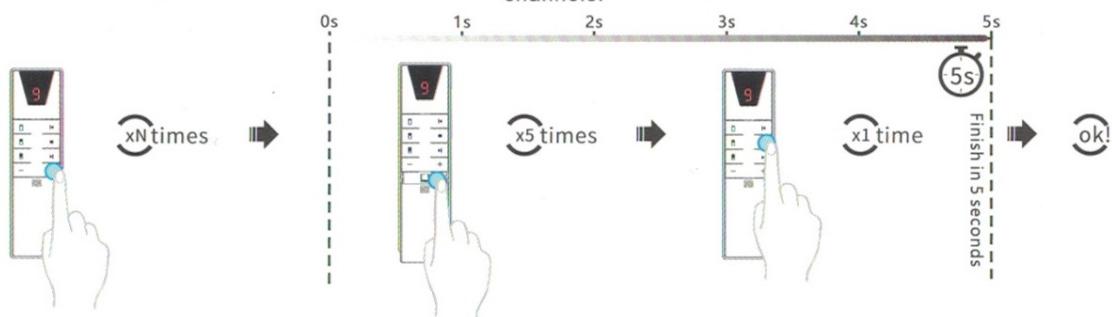

Choose the channel which is connected to the motor by the remote control "+" or "-" key.

Press the remote control "Set key" 5 times, the screen shows 5.


Press the "Stop key" once within 3 seconds.

Motor is successfully set with a "Di" sound.

Delete all remote from the motor

⚠ To cancel the connection between the motor and all remote controls.

Method 1:

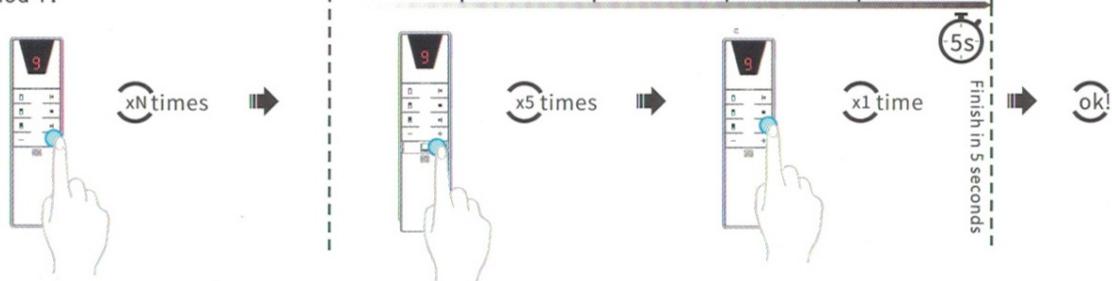


Choose the channel which is connected to the motor by the remote control "+" or "-" key.

Press the remote control "Set key" 5 times, the screen shows 5.

Press the "Down / close key" once within 3 seconds.

Motor is successfully set with a "Di" sound.

Method 2:

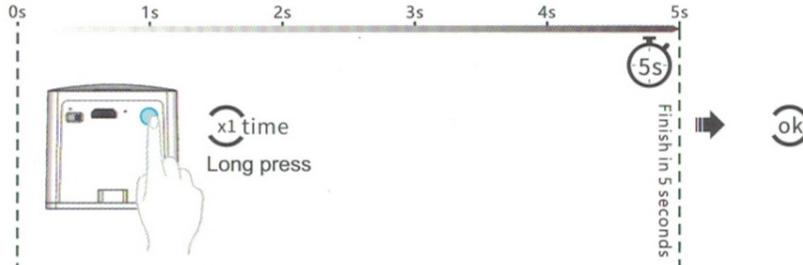


Long press the motor's "Set key" until the motor makes a sound "Di", then release motor in 5 seconds, the motor light flashes rapidly, delete remotes successfully.

Other functions

⚠ The following functions can be set as personal needs.

Change the remote control direction

⚠ Repeat this operation for "Up / open" to "Down / close", or "Down / close" to "Up / open".

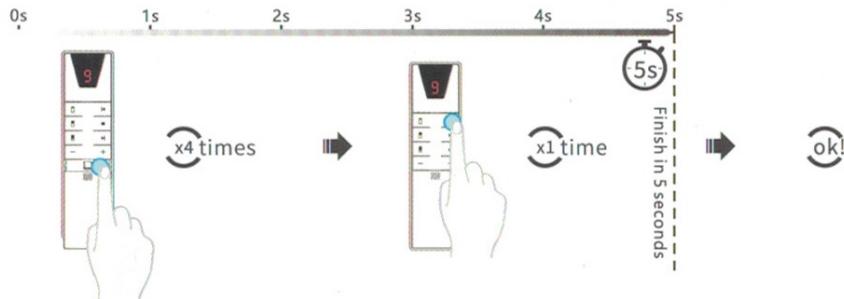


Press the remote control "Set key" 4 times, the screen shows 4.

Press the "Up / open key" once within 3 seconds.

Motor is successfully set with a "Di" sound.

Inching or continuation move action

⚠ Repeat this operation can switch inching / continuation move mode.

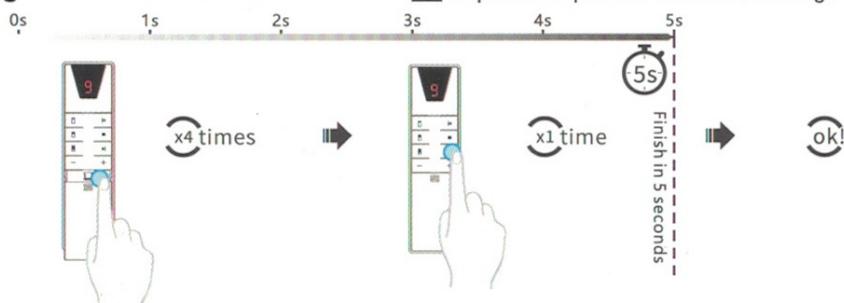


Press the remote control "Set key" 4 times, the screen shows 4.

Press the "Down / close key" once within 3 seconds.

Motor is successfully set with a "Di" sound.

Lock or open the remote channel

⚠ Lock the channel: Do this operation when you have chosen the channel which you want to lock.

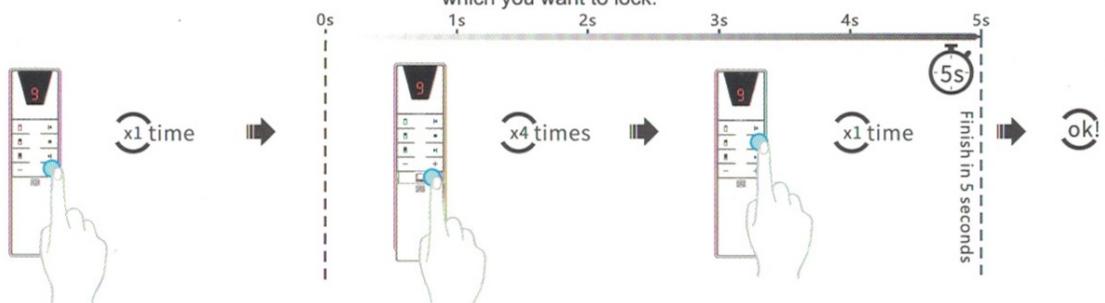


Press the remote control "+" or "-" key to choose the channel which you want to lock.

Press the remote control "Set key" 4 times, the screen shows 4.

Press the "Stop key" once within 3 seconds.

Lock channel successfully

⚠ Open the channel: Do this operation whatever any channel.

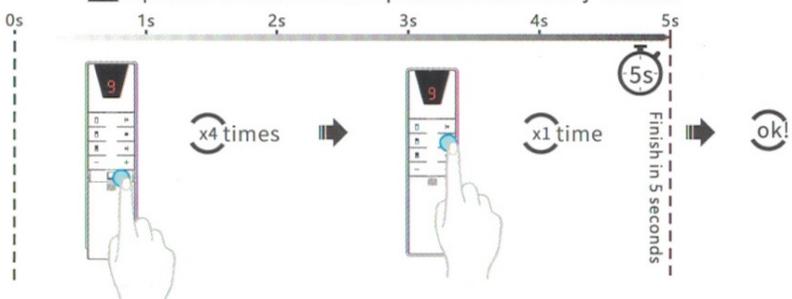

Press the remote control "Set key" 4 times, the screen shows 4.

Press the "Stop key" once within 3 seconds.


Open channel successfully

Delete limit

⚠ You can delete the limit at any position.

Delete up limit

Please finish this process within 5 seconds, otherwise it will exit the setting due to overtime

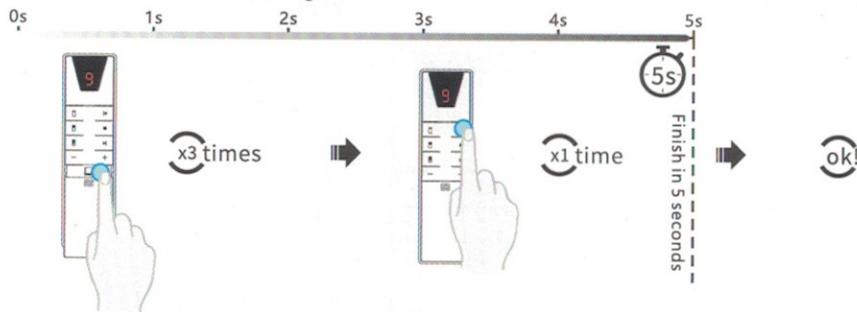


Press the remote control "Set key" 3 times, the screen shows 3.

Press the "Up / open key" once within 3 seconds.

Motor is successfully set with a "Di" sound.

Delete down limit

Please finish this process within 5 seconds, otherwise it will exit the setting due to overtime

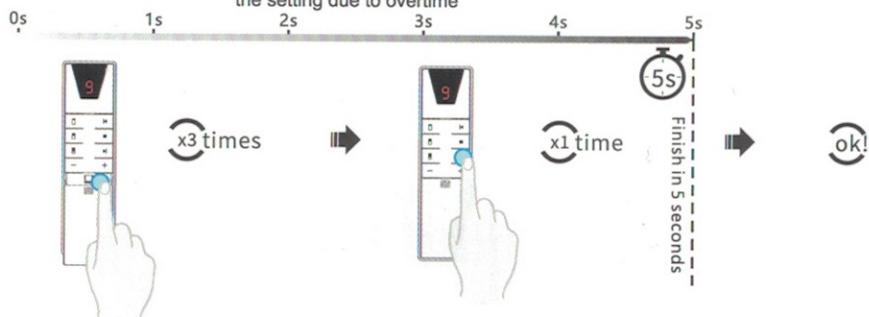


Press the remote control "Set key" 3 times, the screen shows 3.

Press the "Down / close key" once within 3 seconds.

Motor is successfully set with a "Di" sound.

Delete all limits

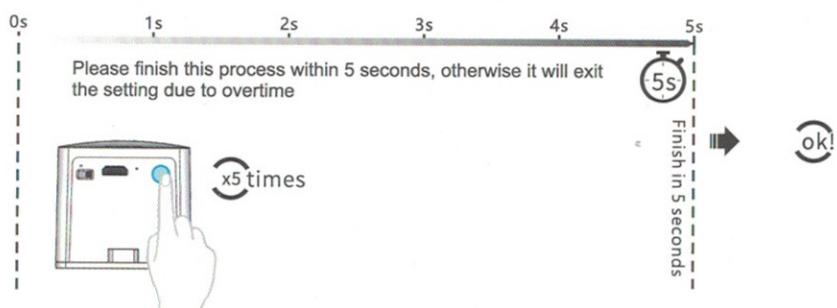

Press the motor's "Set key" 5 times within 5 seconds with a "Di" sound, then the motor light flashes rapidly, deleted limit successfully.