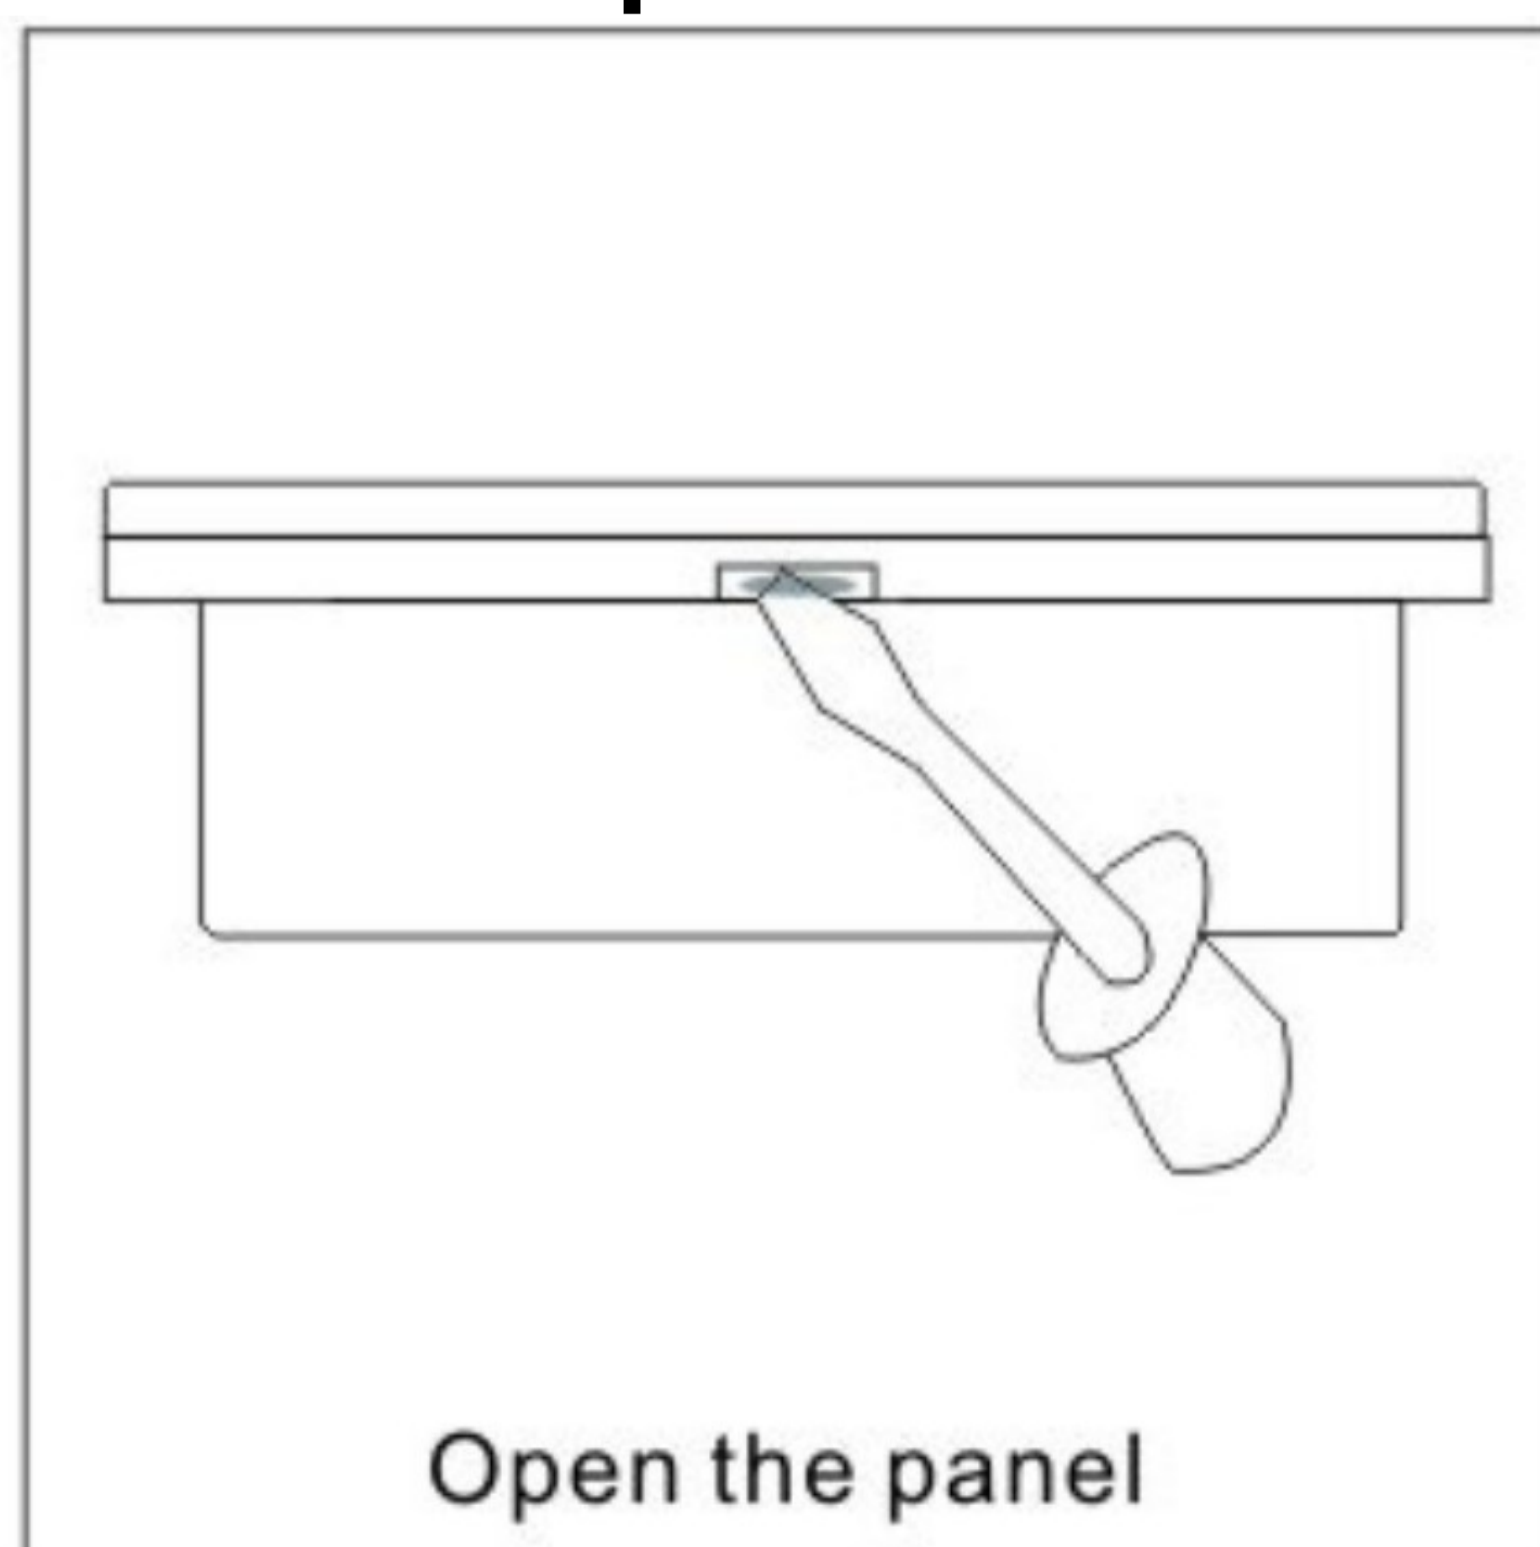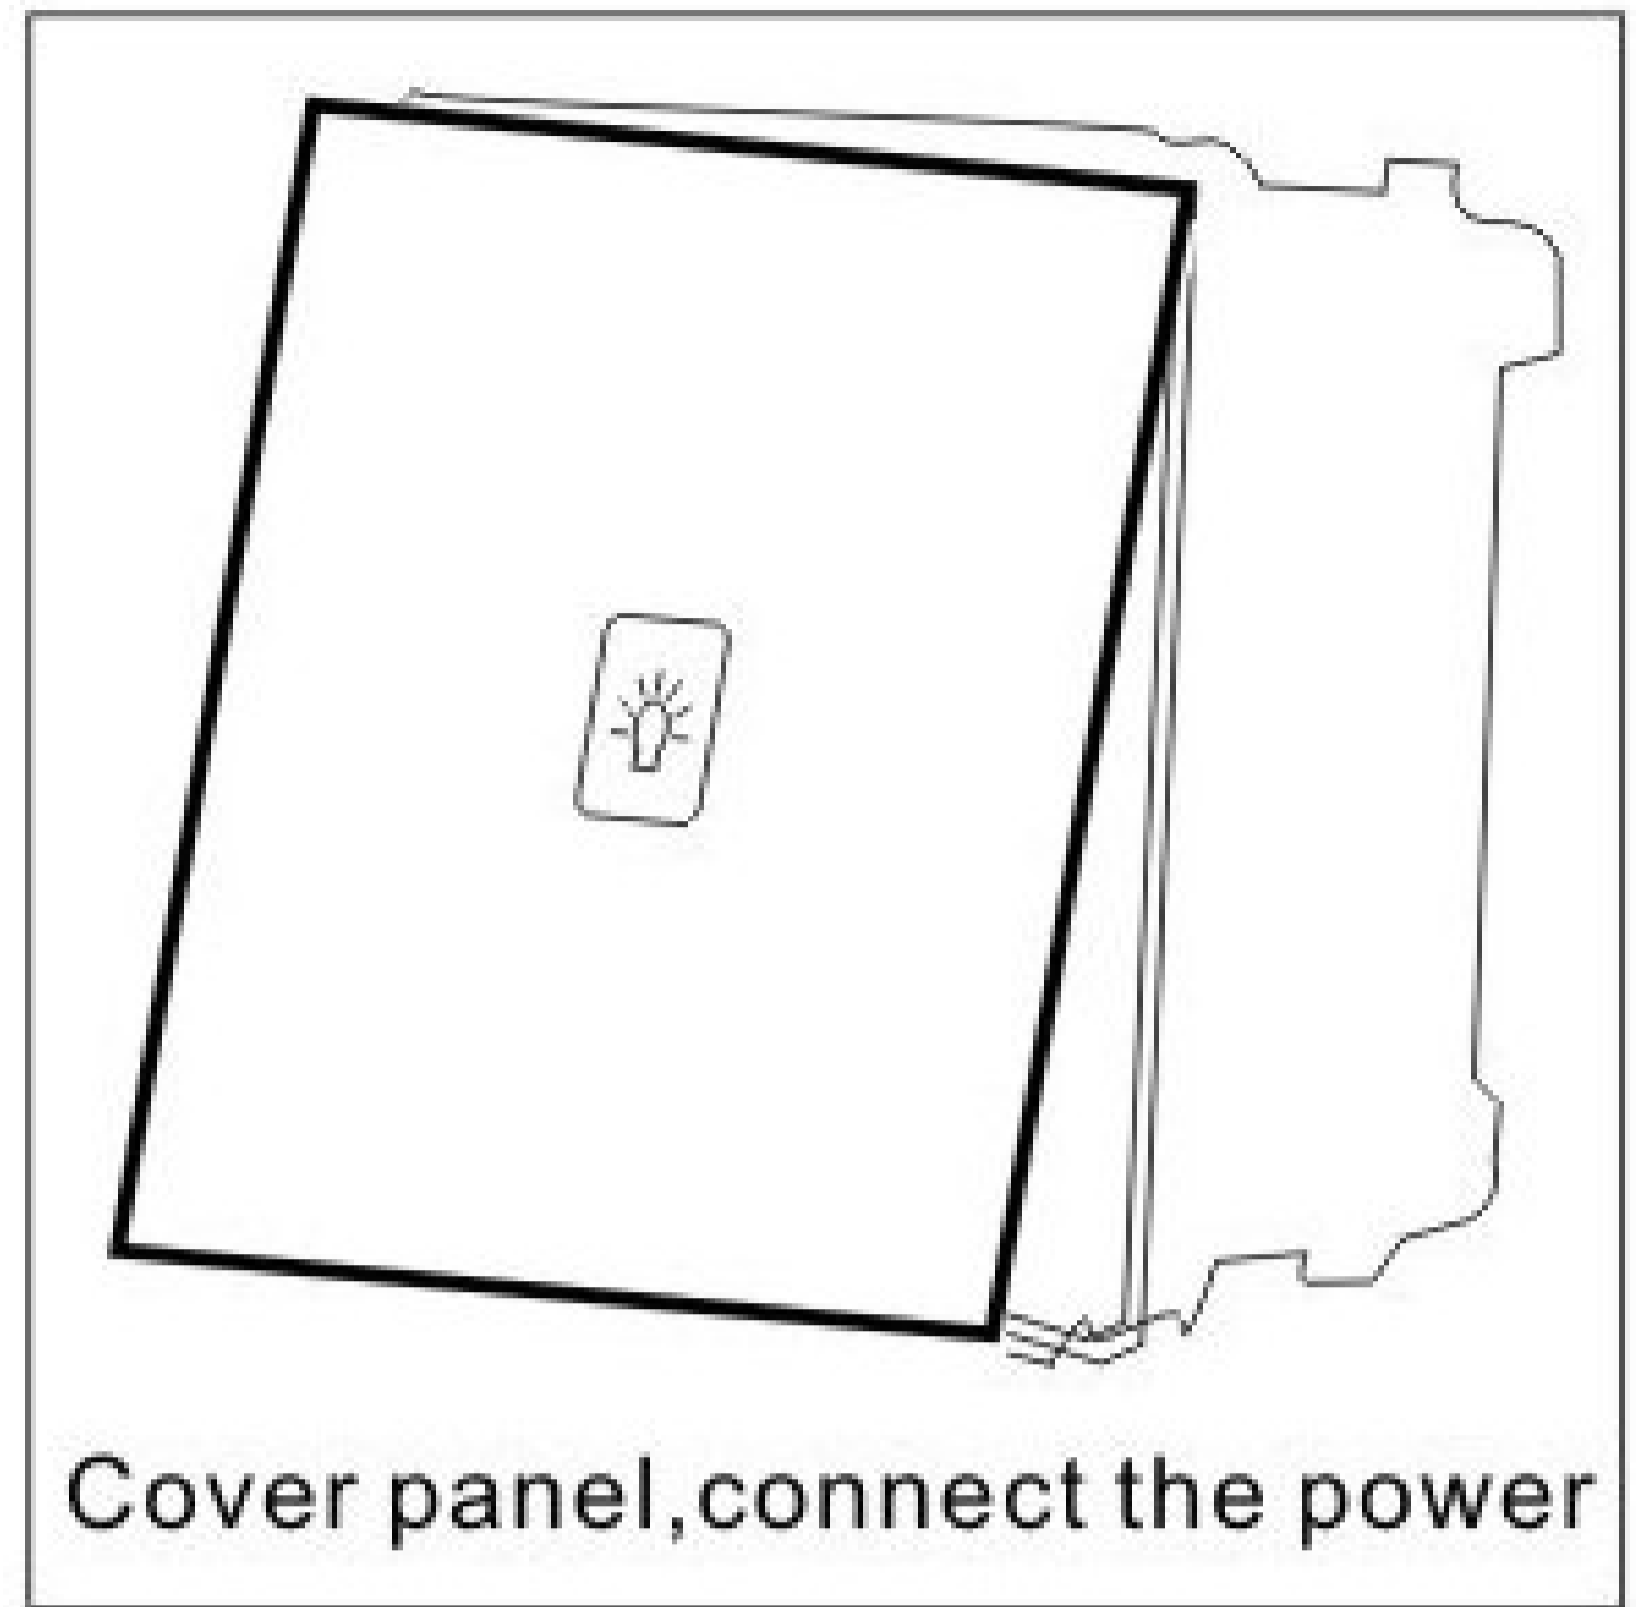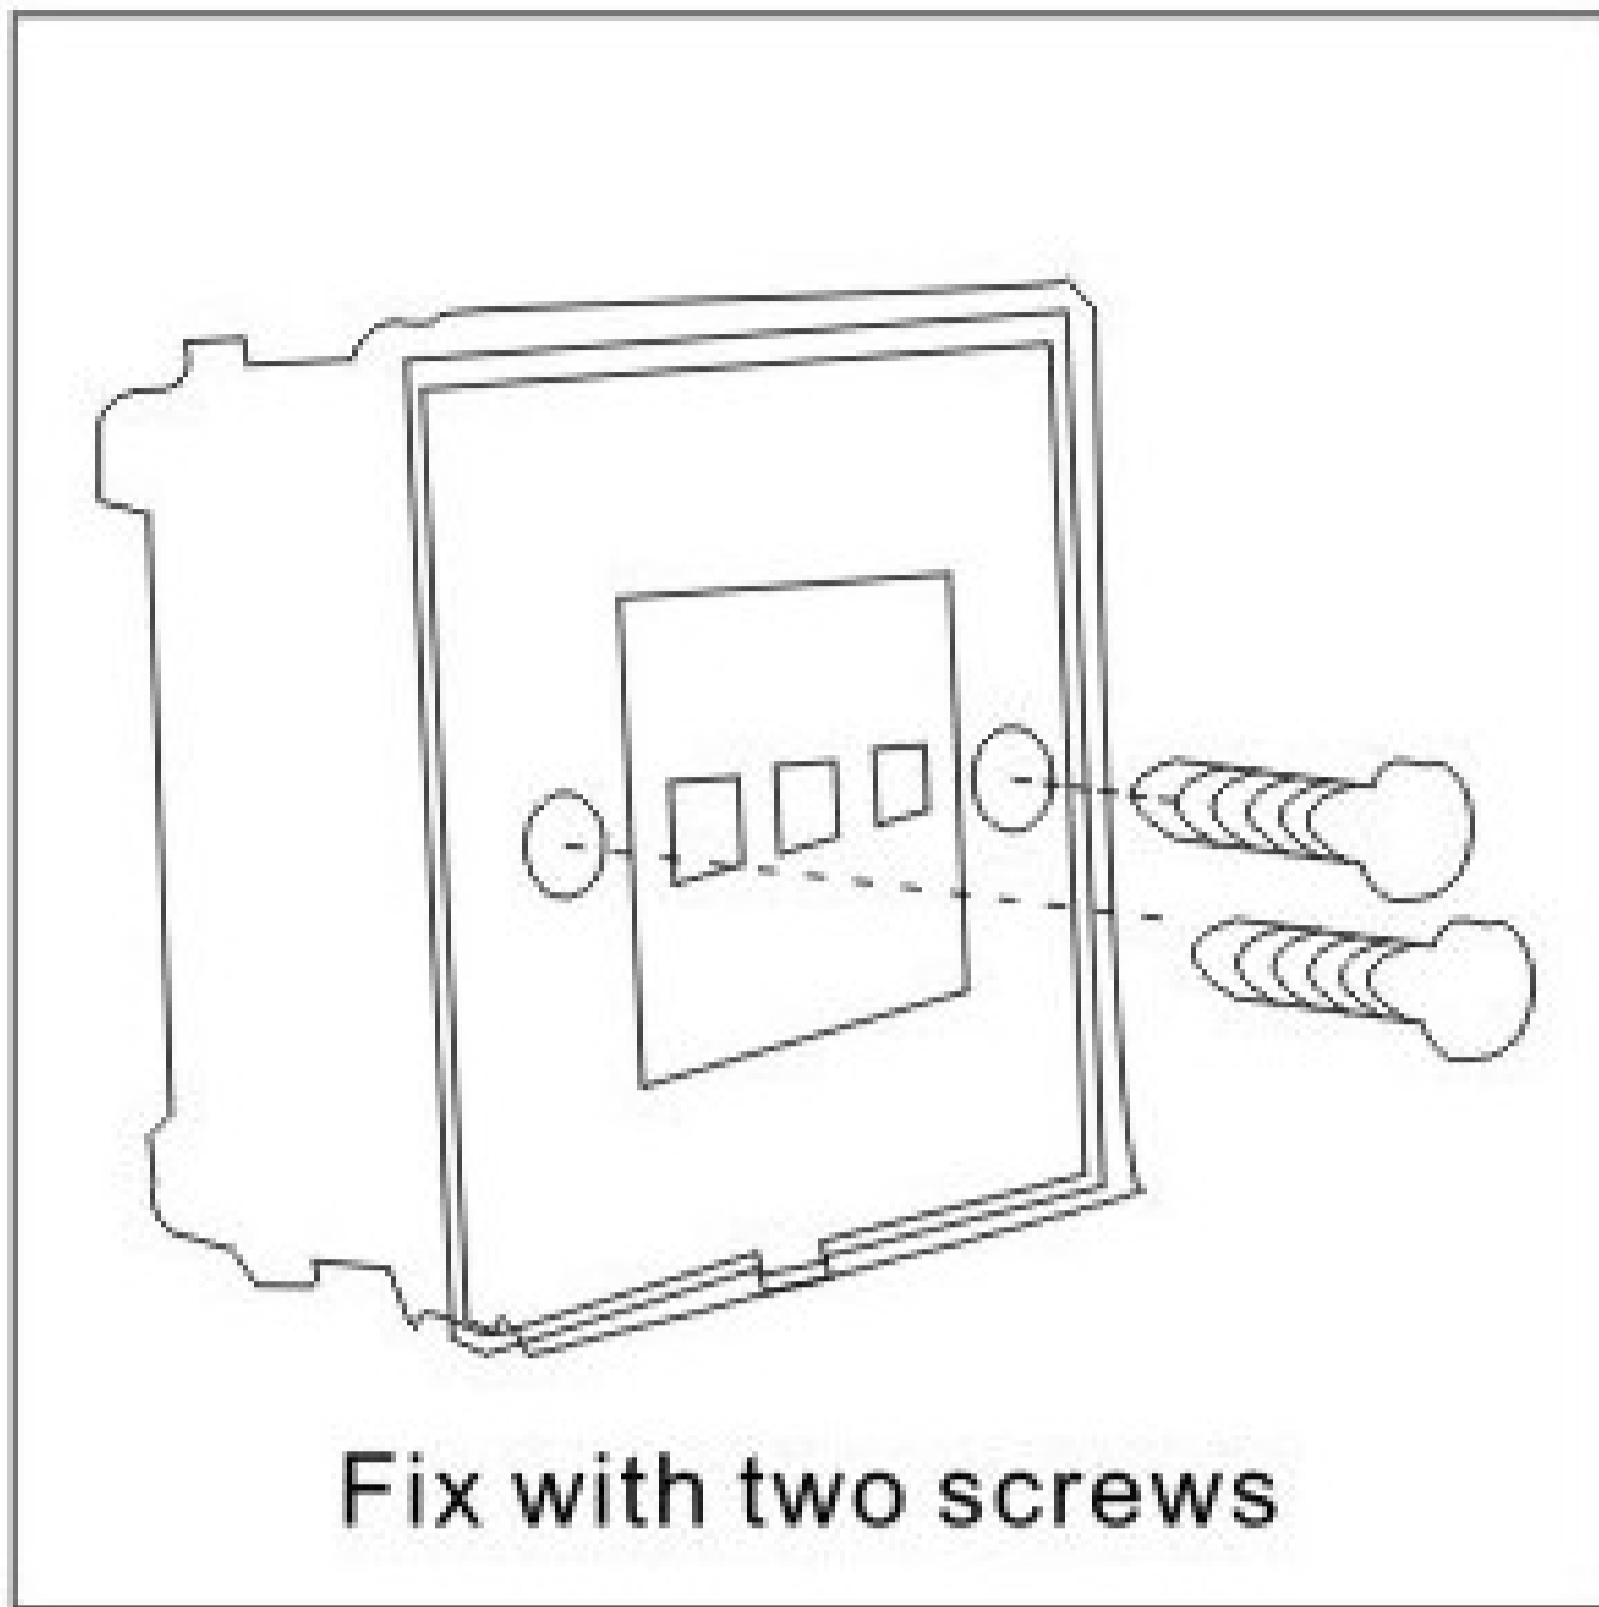warning

Please read the instructions carefully before installation. The manufacturers will not be responsible for any failure operations not follow the instructions. Use a licensed electrician

Special attentions:
1- Do not install with power.
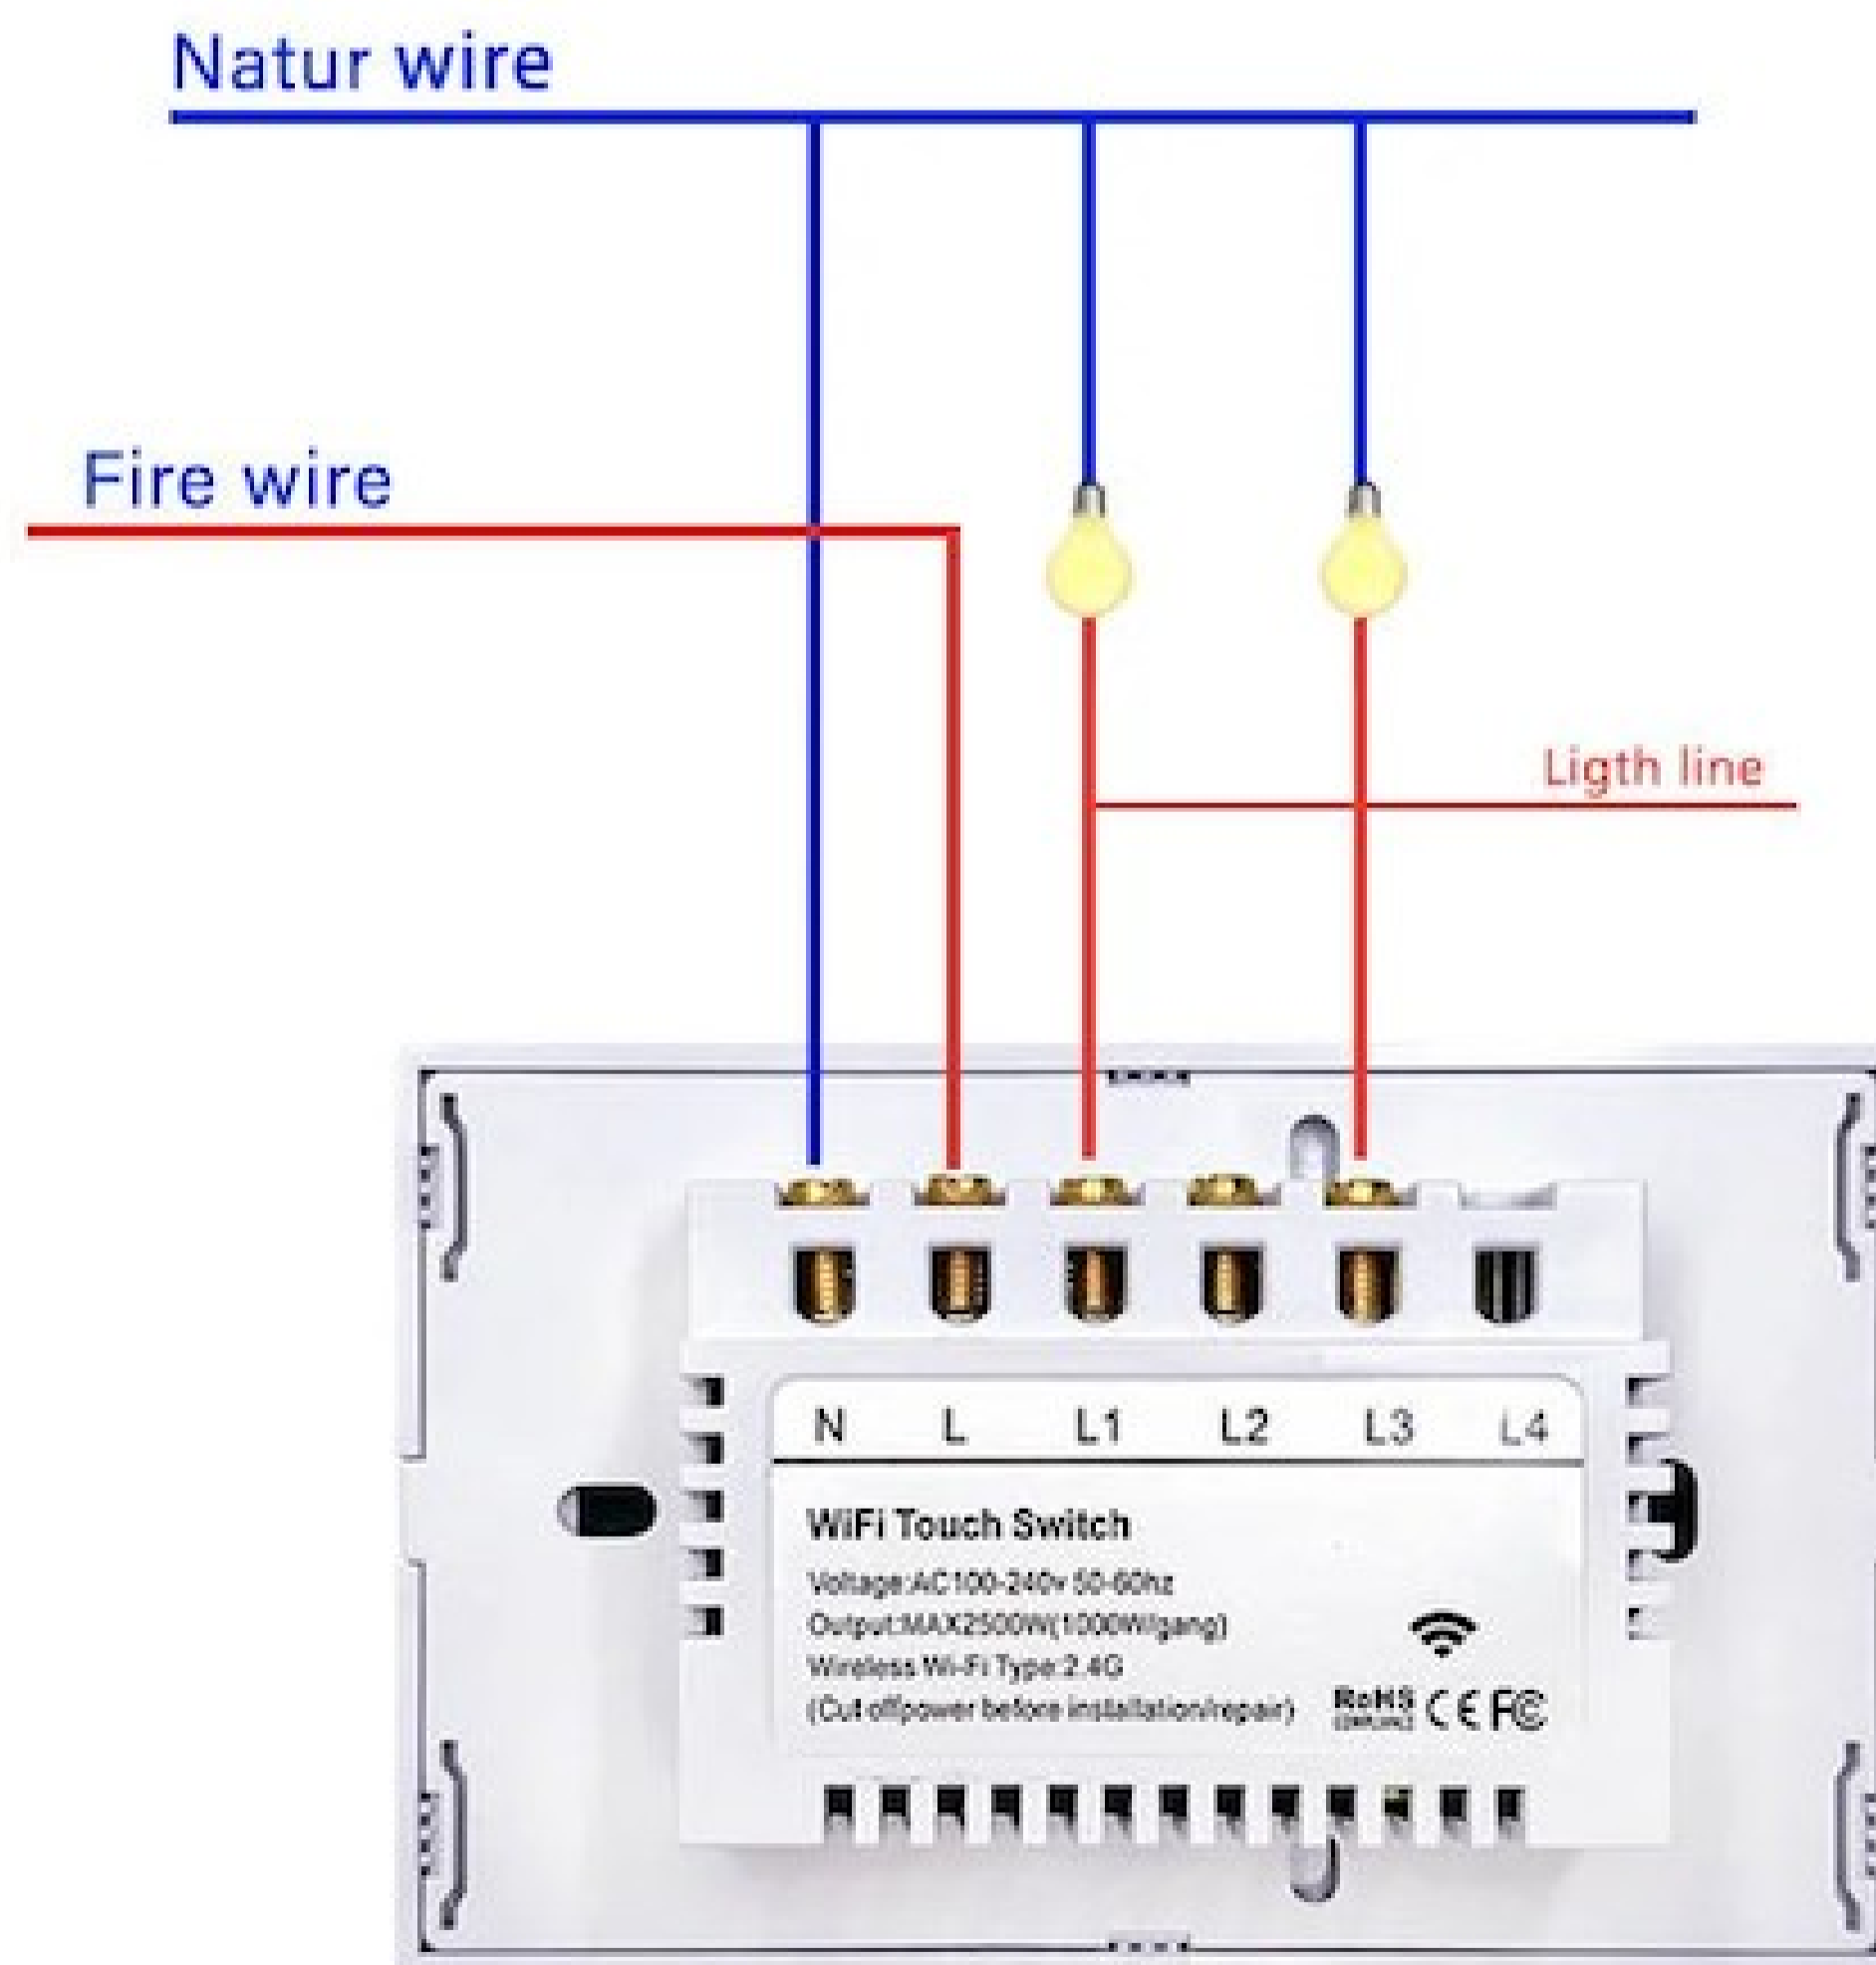## 2- Strictly in accordance with product wiring diagram.
3- Do not over load.

I. Installation Steps:

Open the panel

Fix with two screws

Cover panel,connect the power

II. Wiring Diagram

1- Neutral & Live Line Mode

Natur wire

Fire wire

Ligth line

N L L1 L2 L3 L4

WiFi Touch Switch

Voltage:AC100-240v 50-60hz
Output:MAX2500W(1000W/gang)
Wireless Wi-Fi Type:2.4G
(Cut offpower before installation/repair)
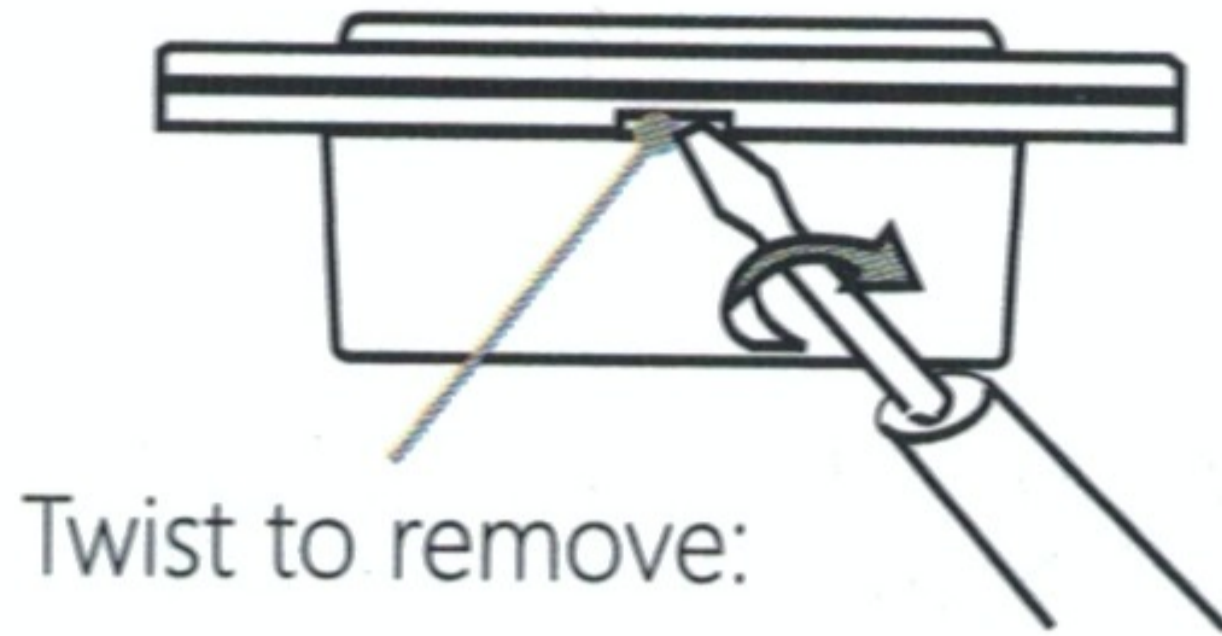
RoHS CE FC

(Figure 1)

2- Single Live Line Model
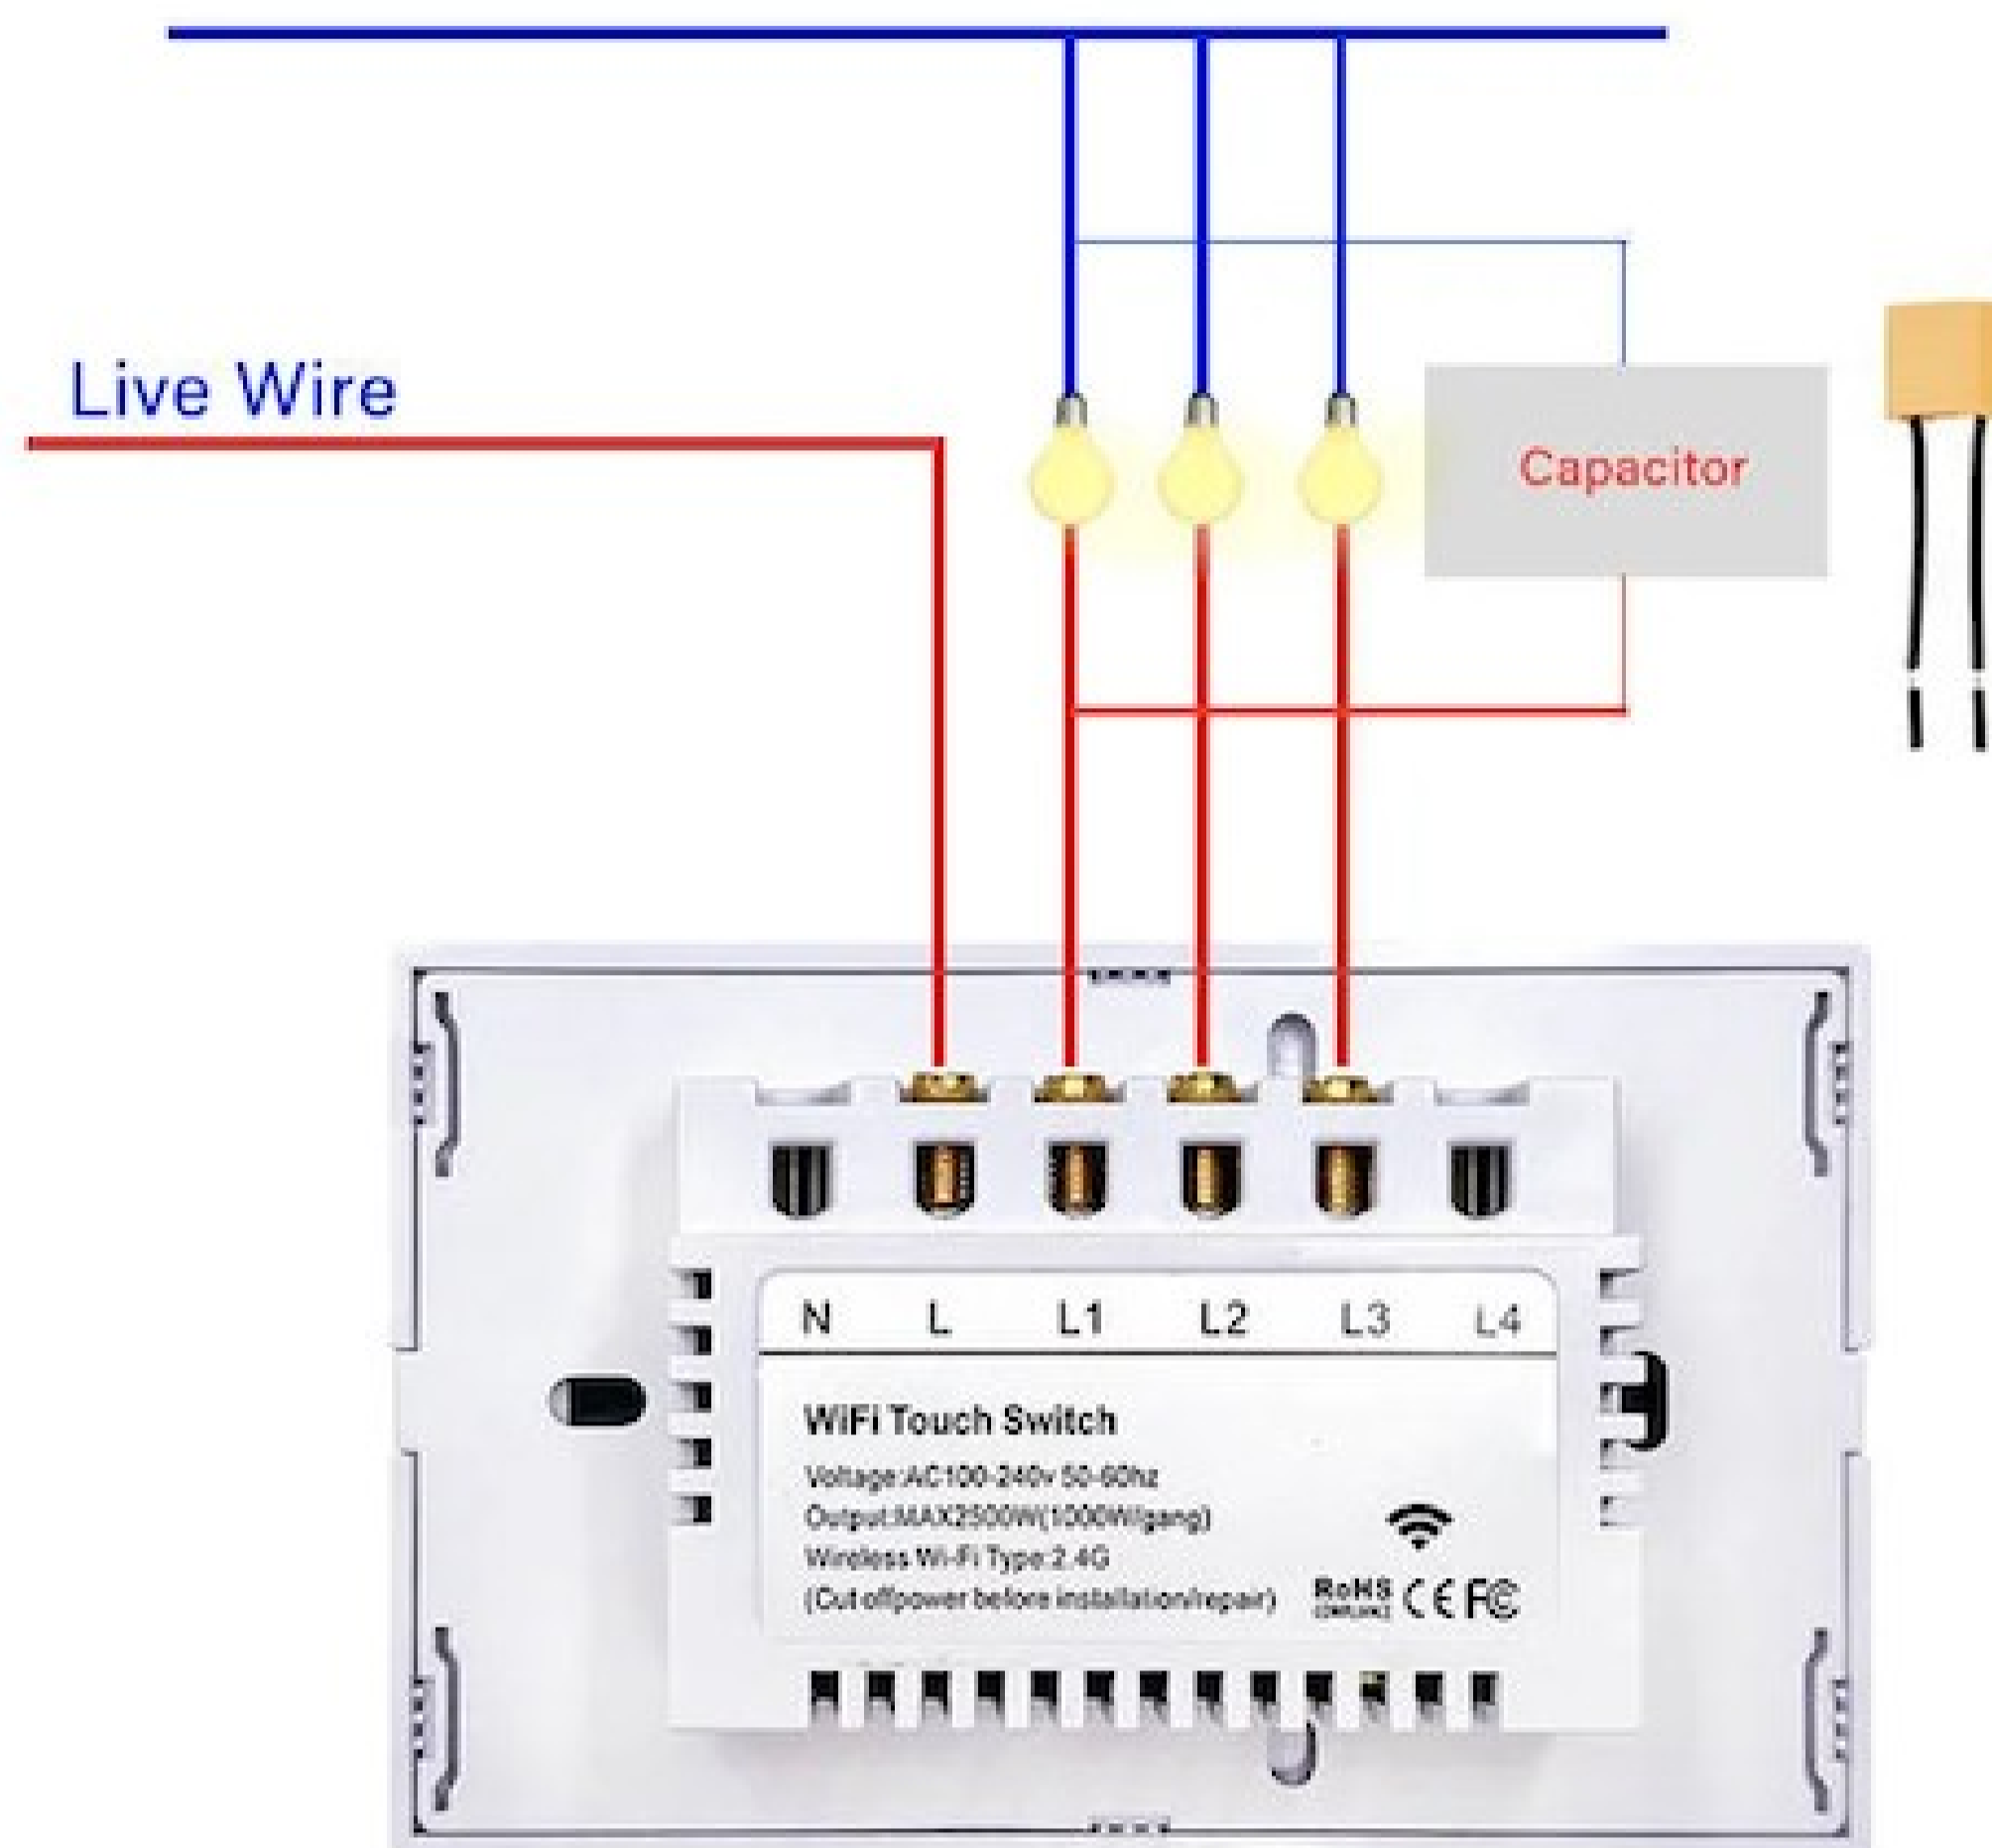
(Figure 2)

3- Fan controller and Dimmer

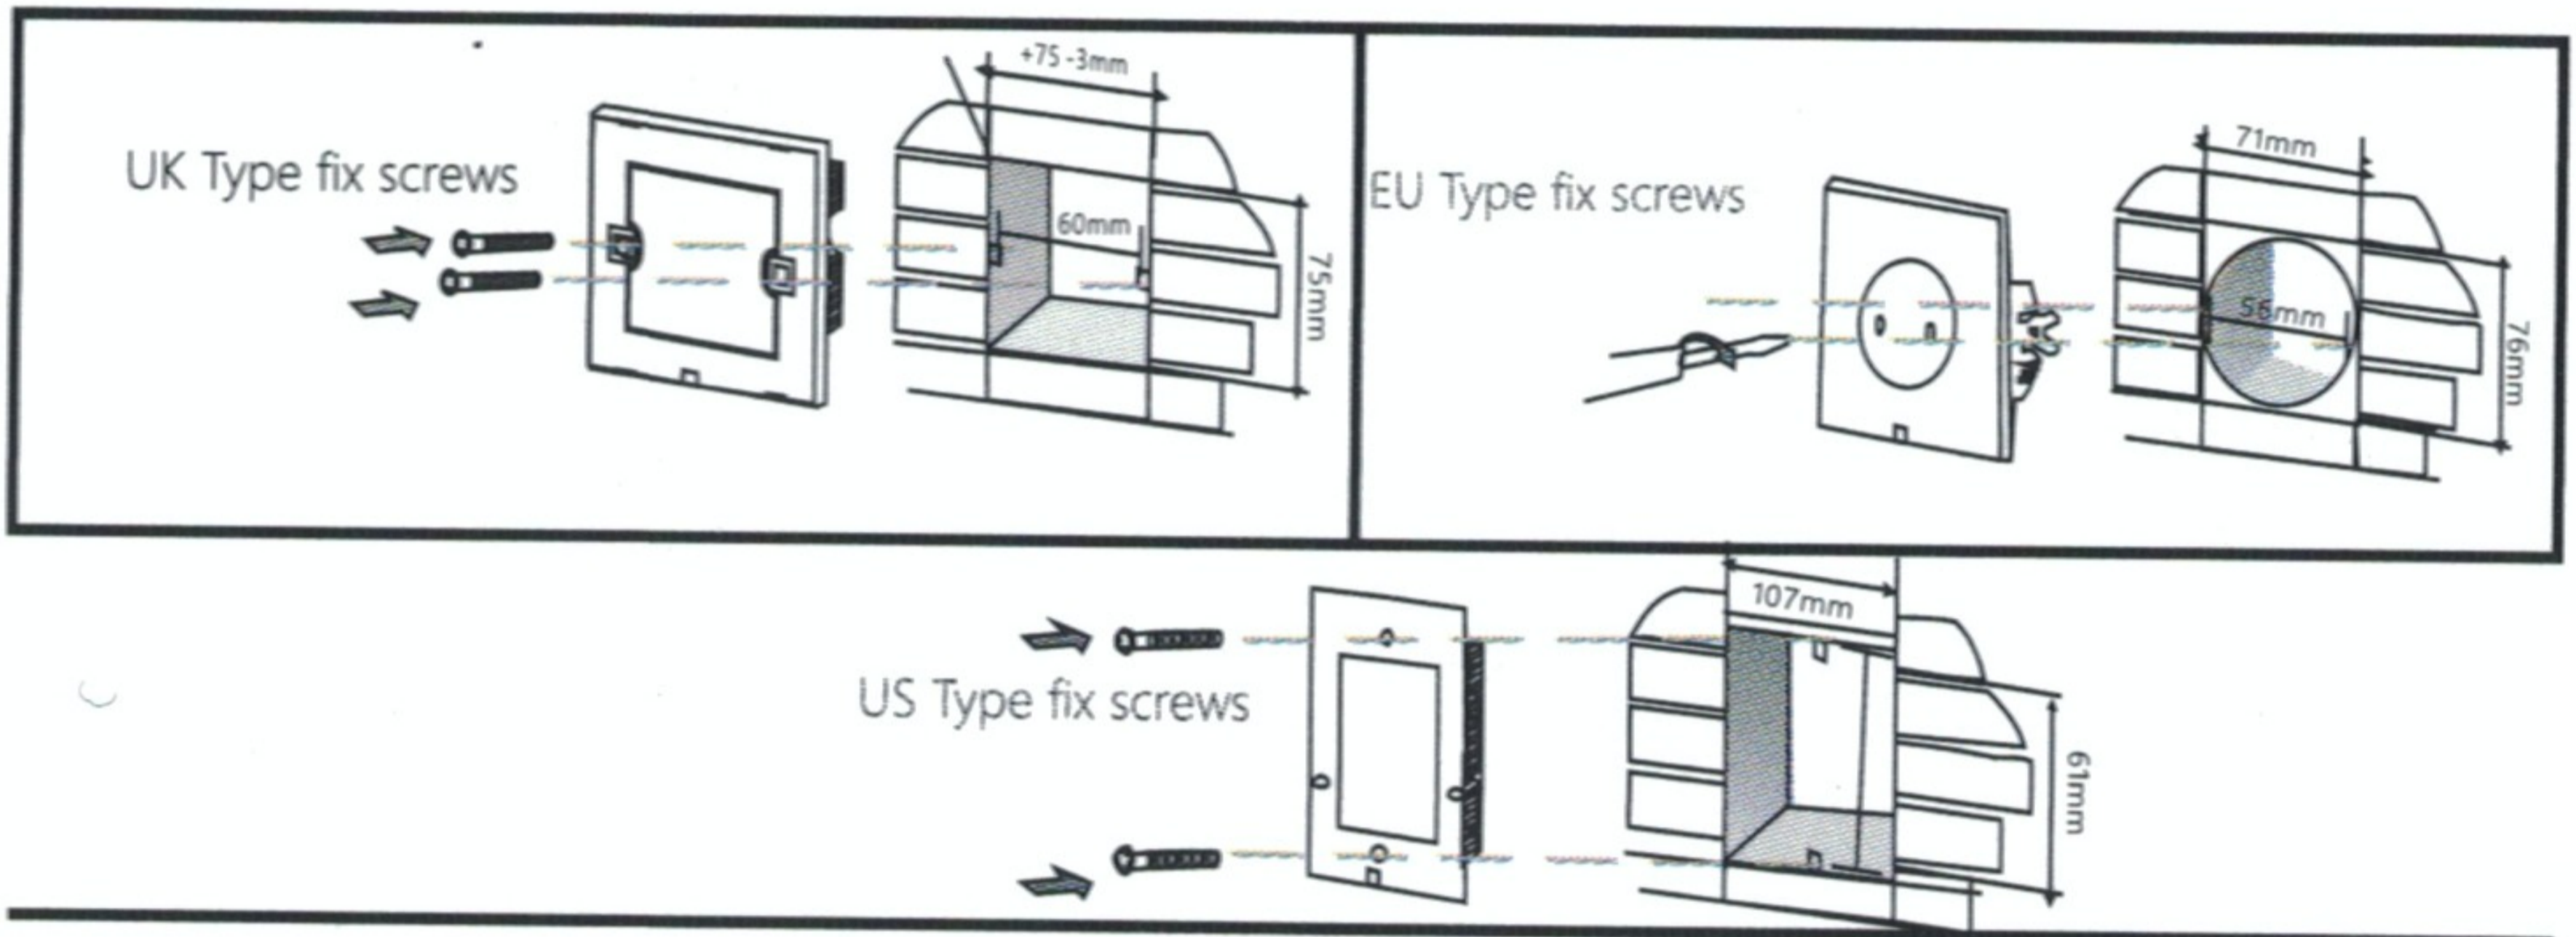## 1. Open the front cover by a small flat screwdriver

Twist to remove:

2. Wiring

Connect wire to the correct terminal and tighten the screws.

Live   Neutral

Neutral
N L L1

Lamp1

IN OUT
N L L1

(1)   (2)

3. Fix screws

UK Type fix screws

+75 -3mm

60mm

75mm

EU Type fix screws

71mm

56mm

76mm

US Type fix screws

107mm

61mm
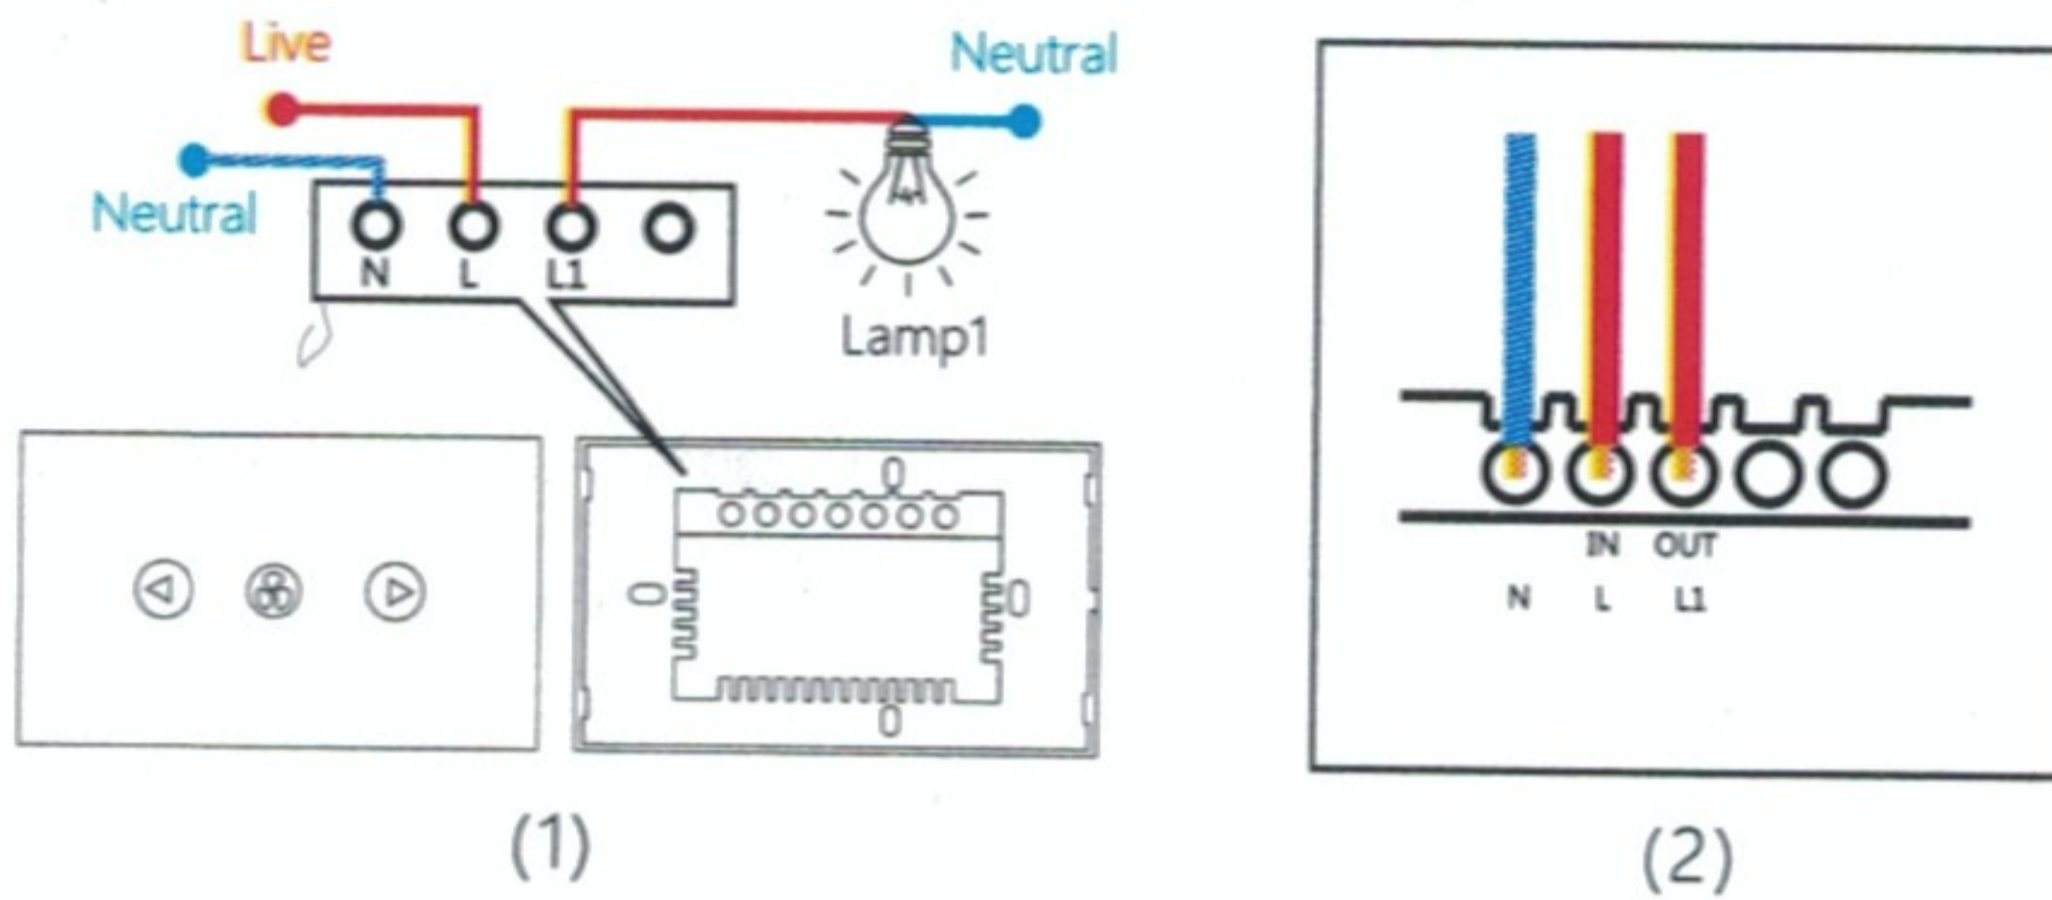
4. Cover the panel and connect the power.

lock here first

Push until click

If you make touch testing without glass panel cover please turn off general power after testing ,then put on glass panel cover to switch and turn on general power again
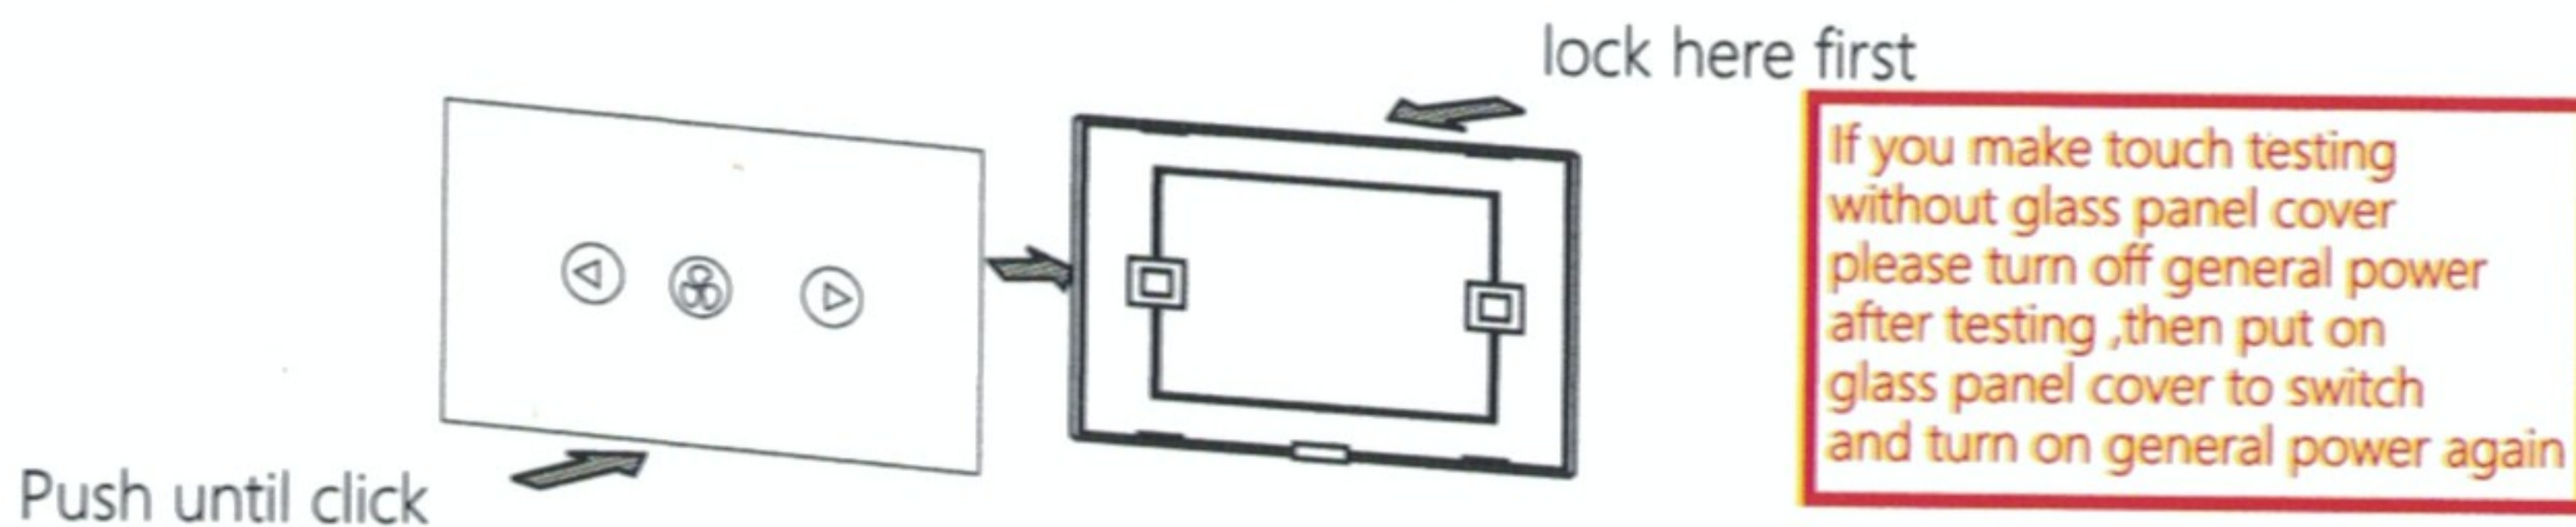
Add to Home App
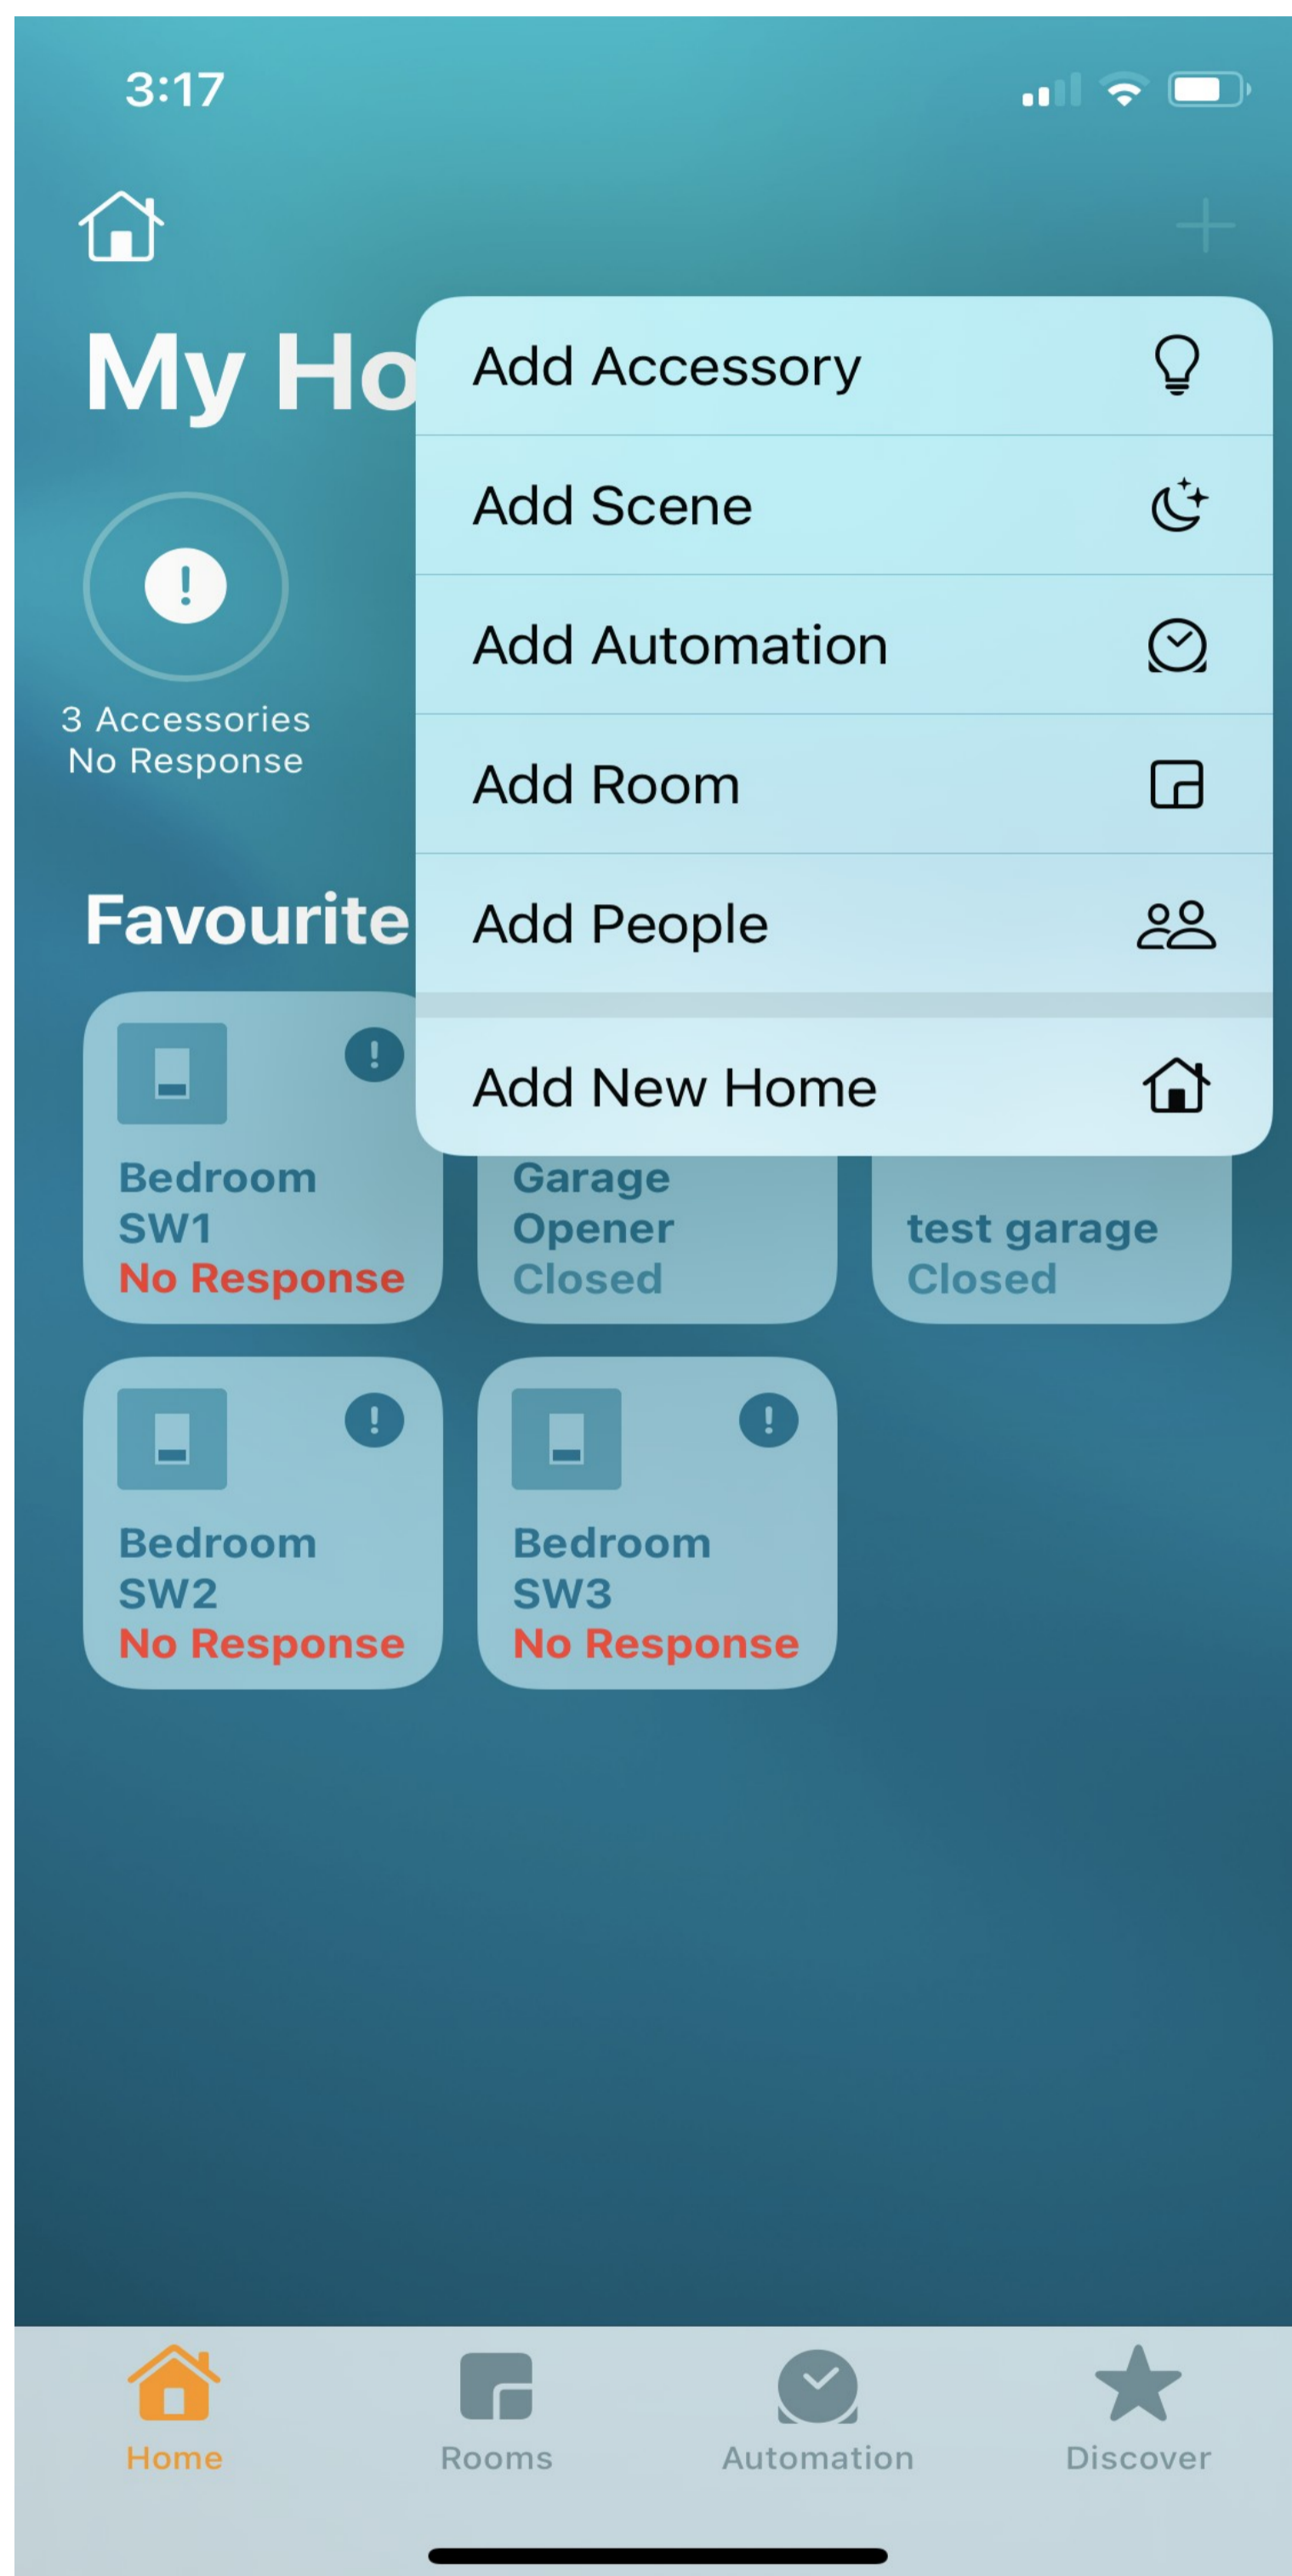
Start Home App and select + or Add Accessory on the top right
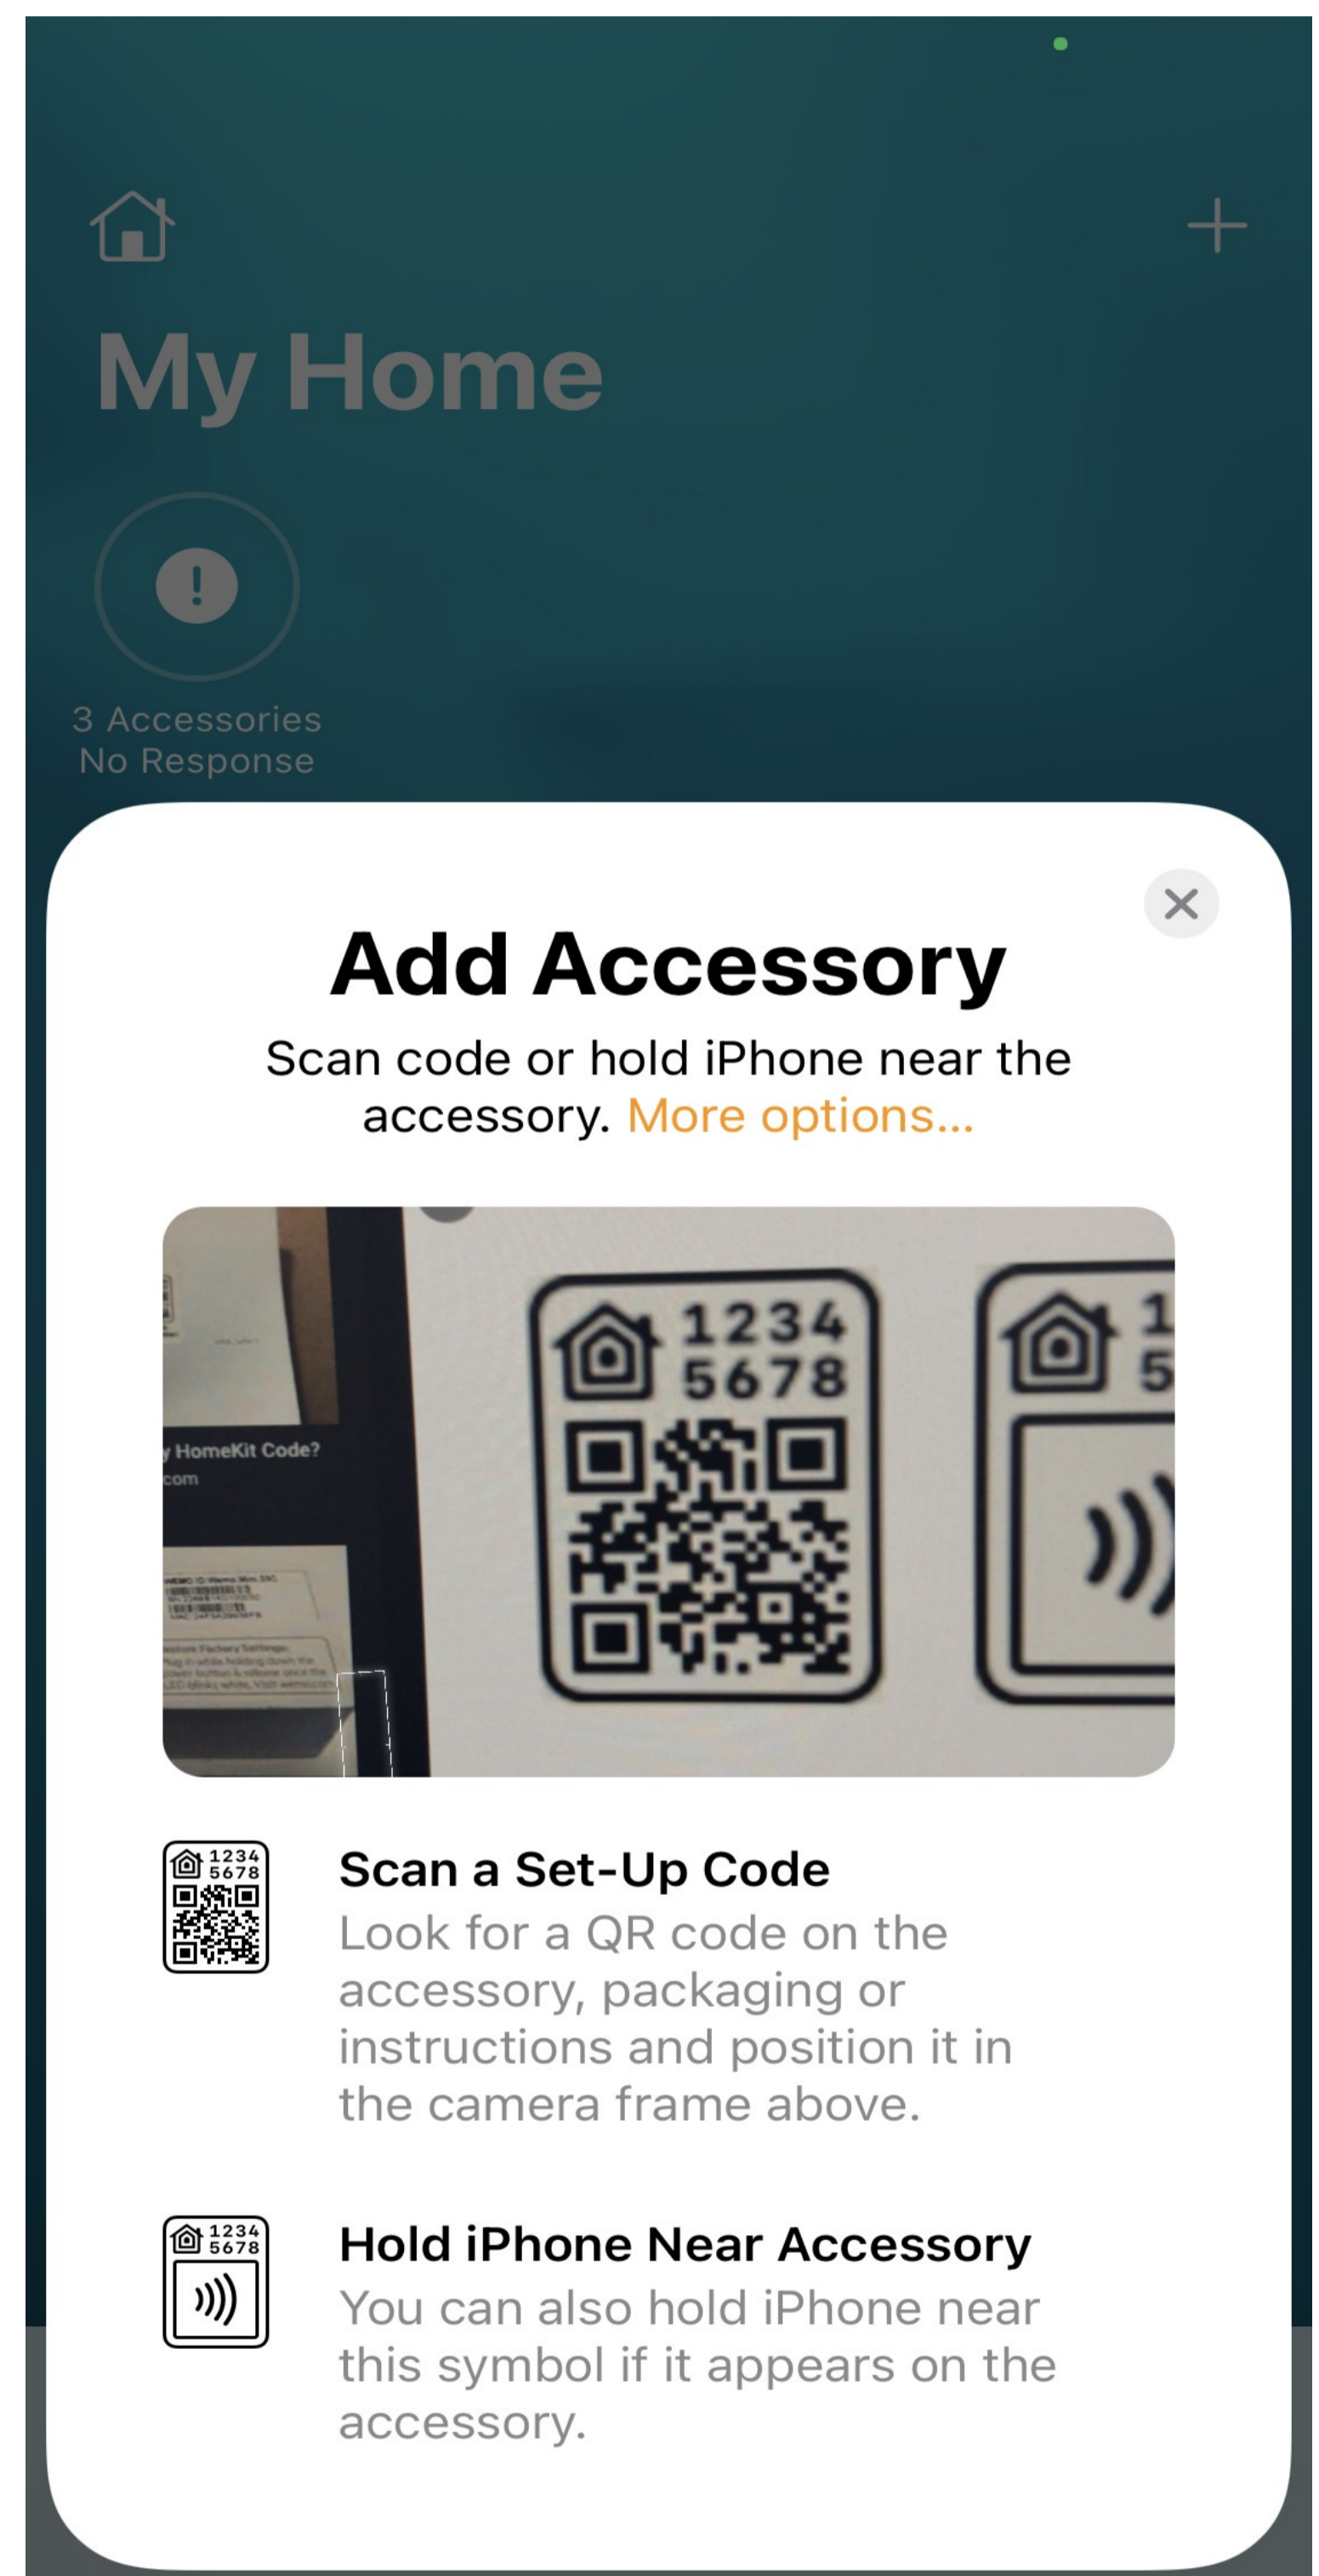
You can either scan the QR code or if the QR code is not visible (next page)

My Home

3 Accessories
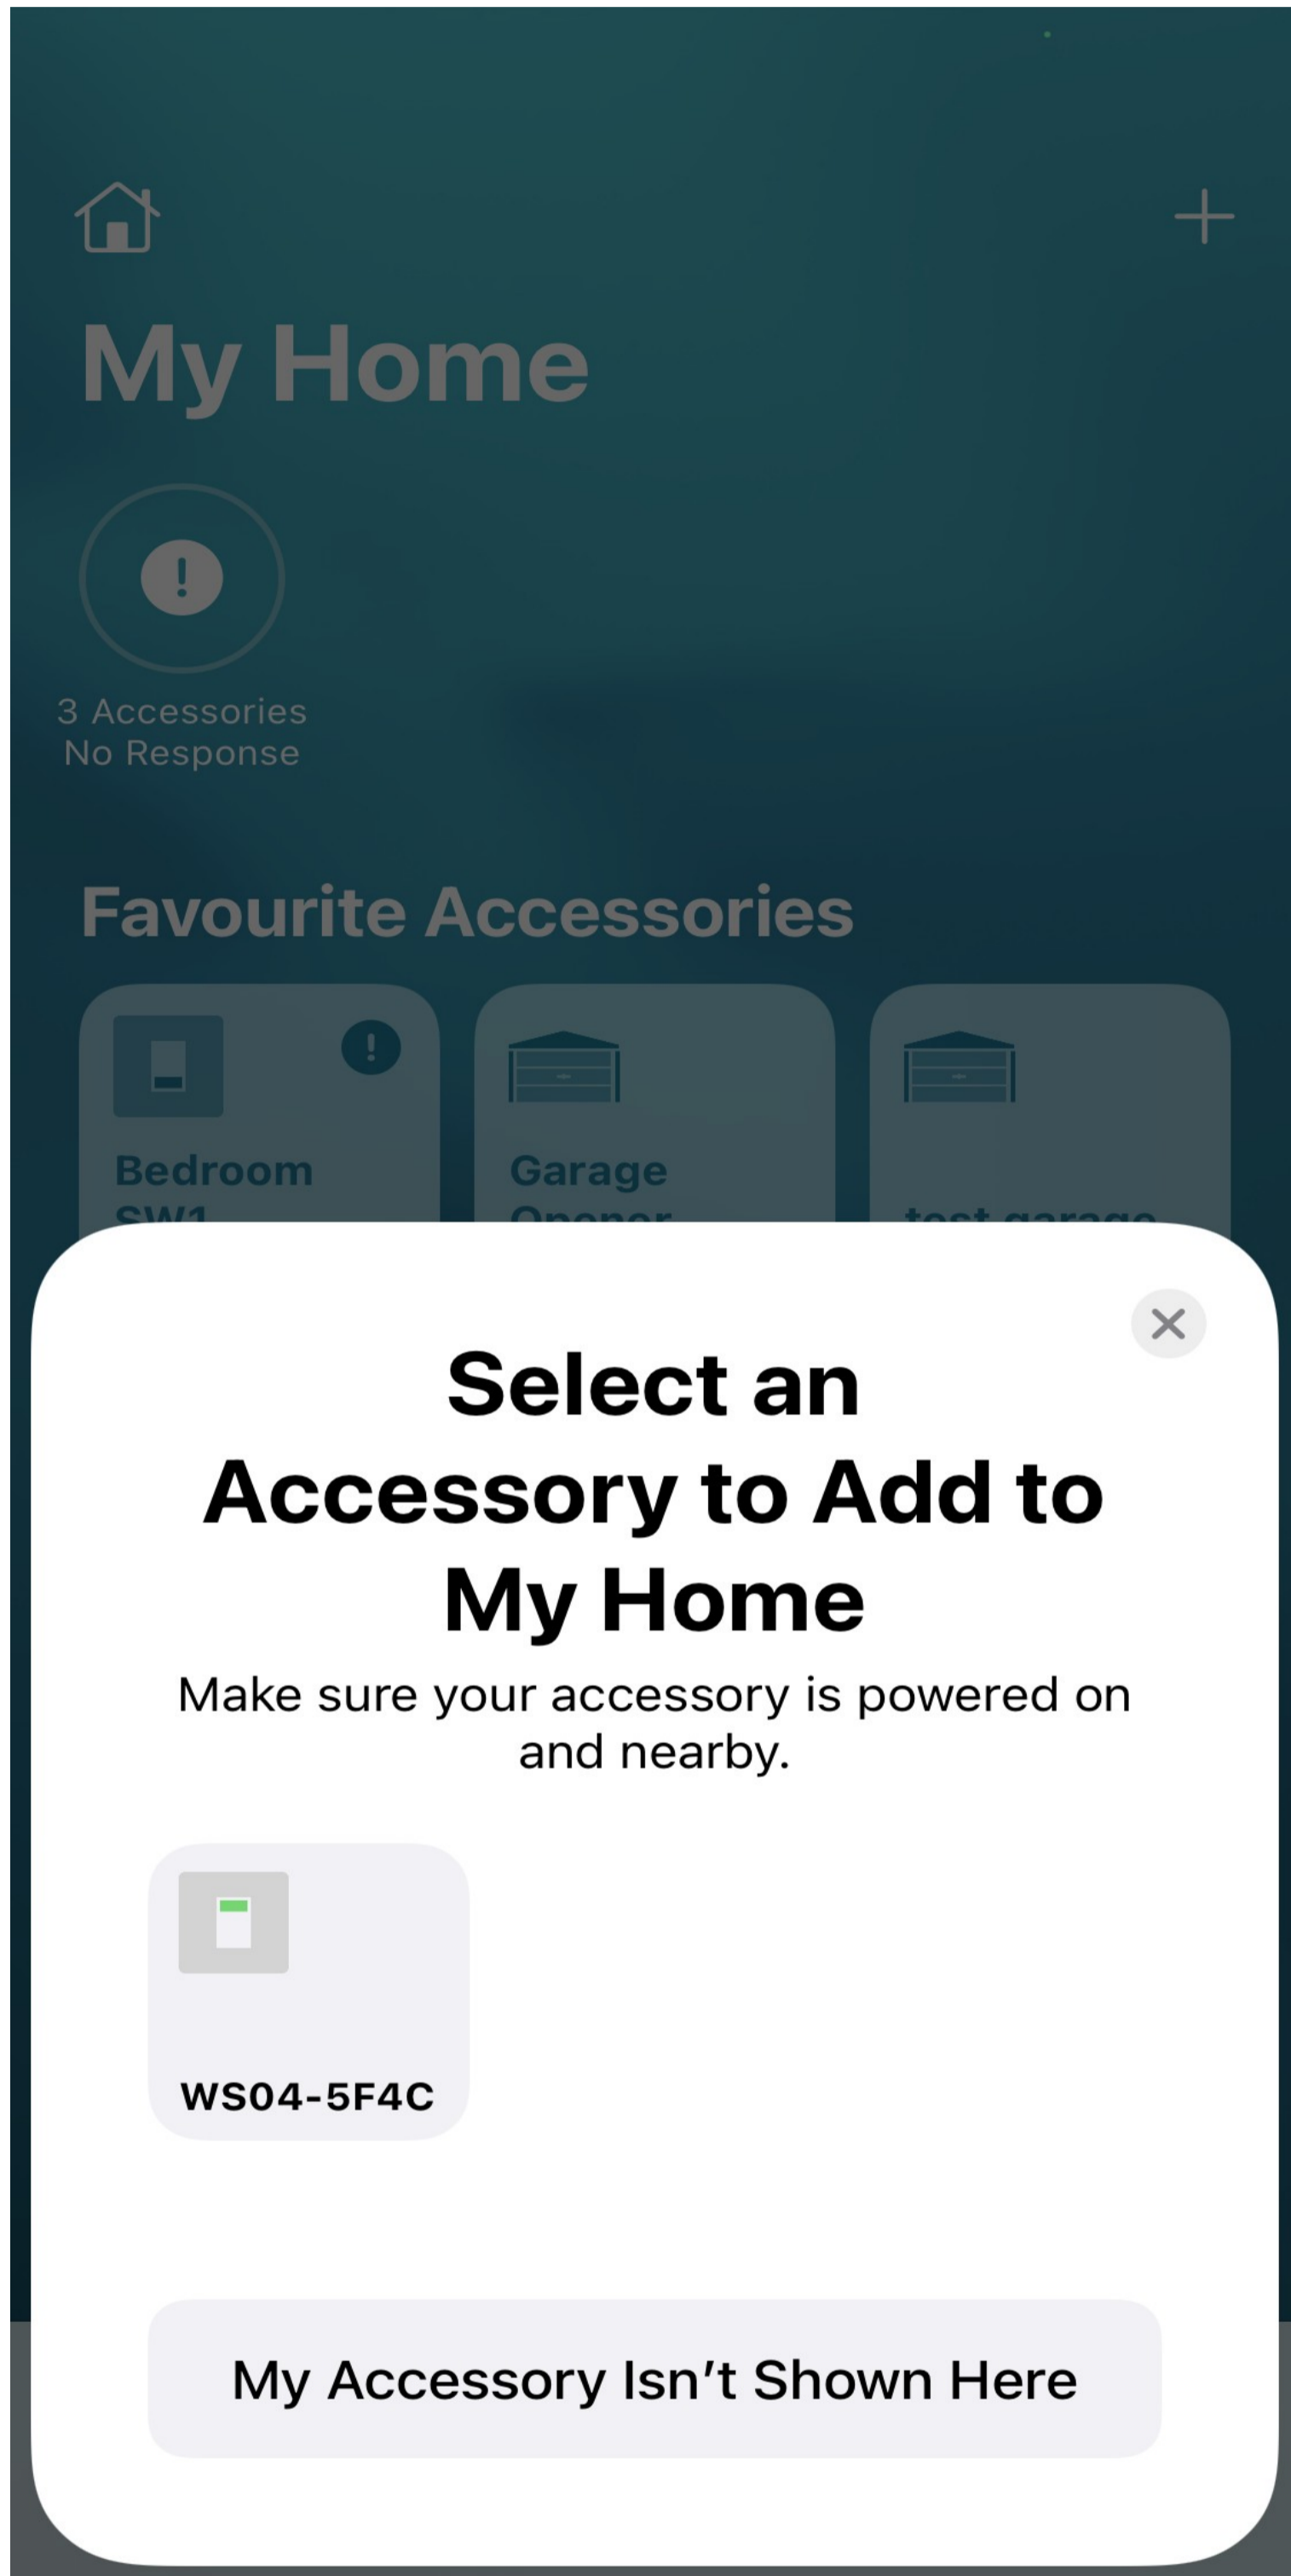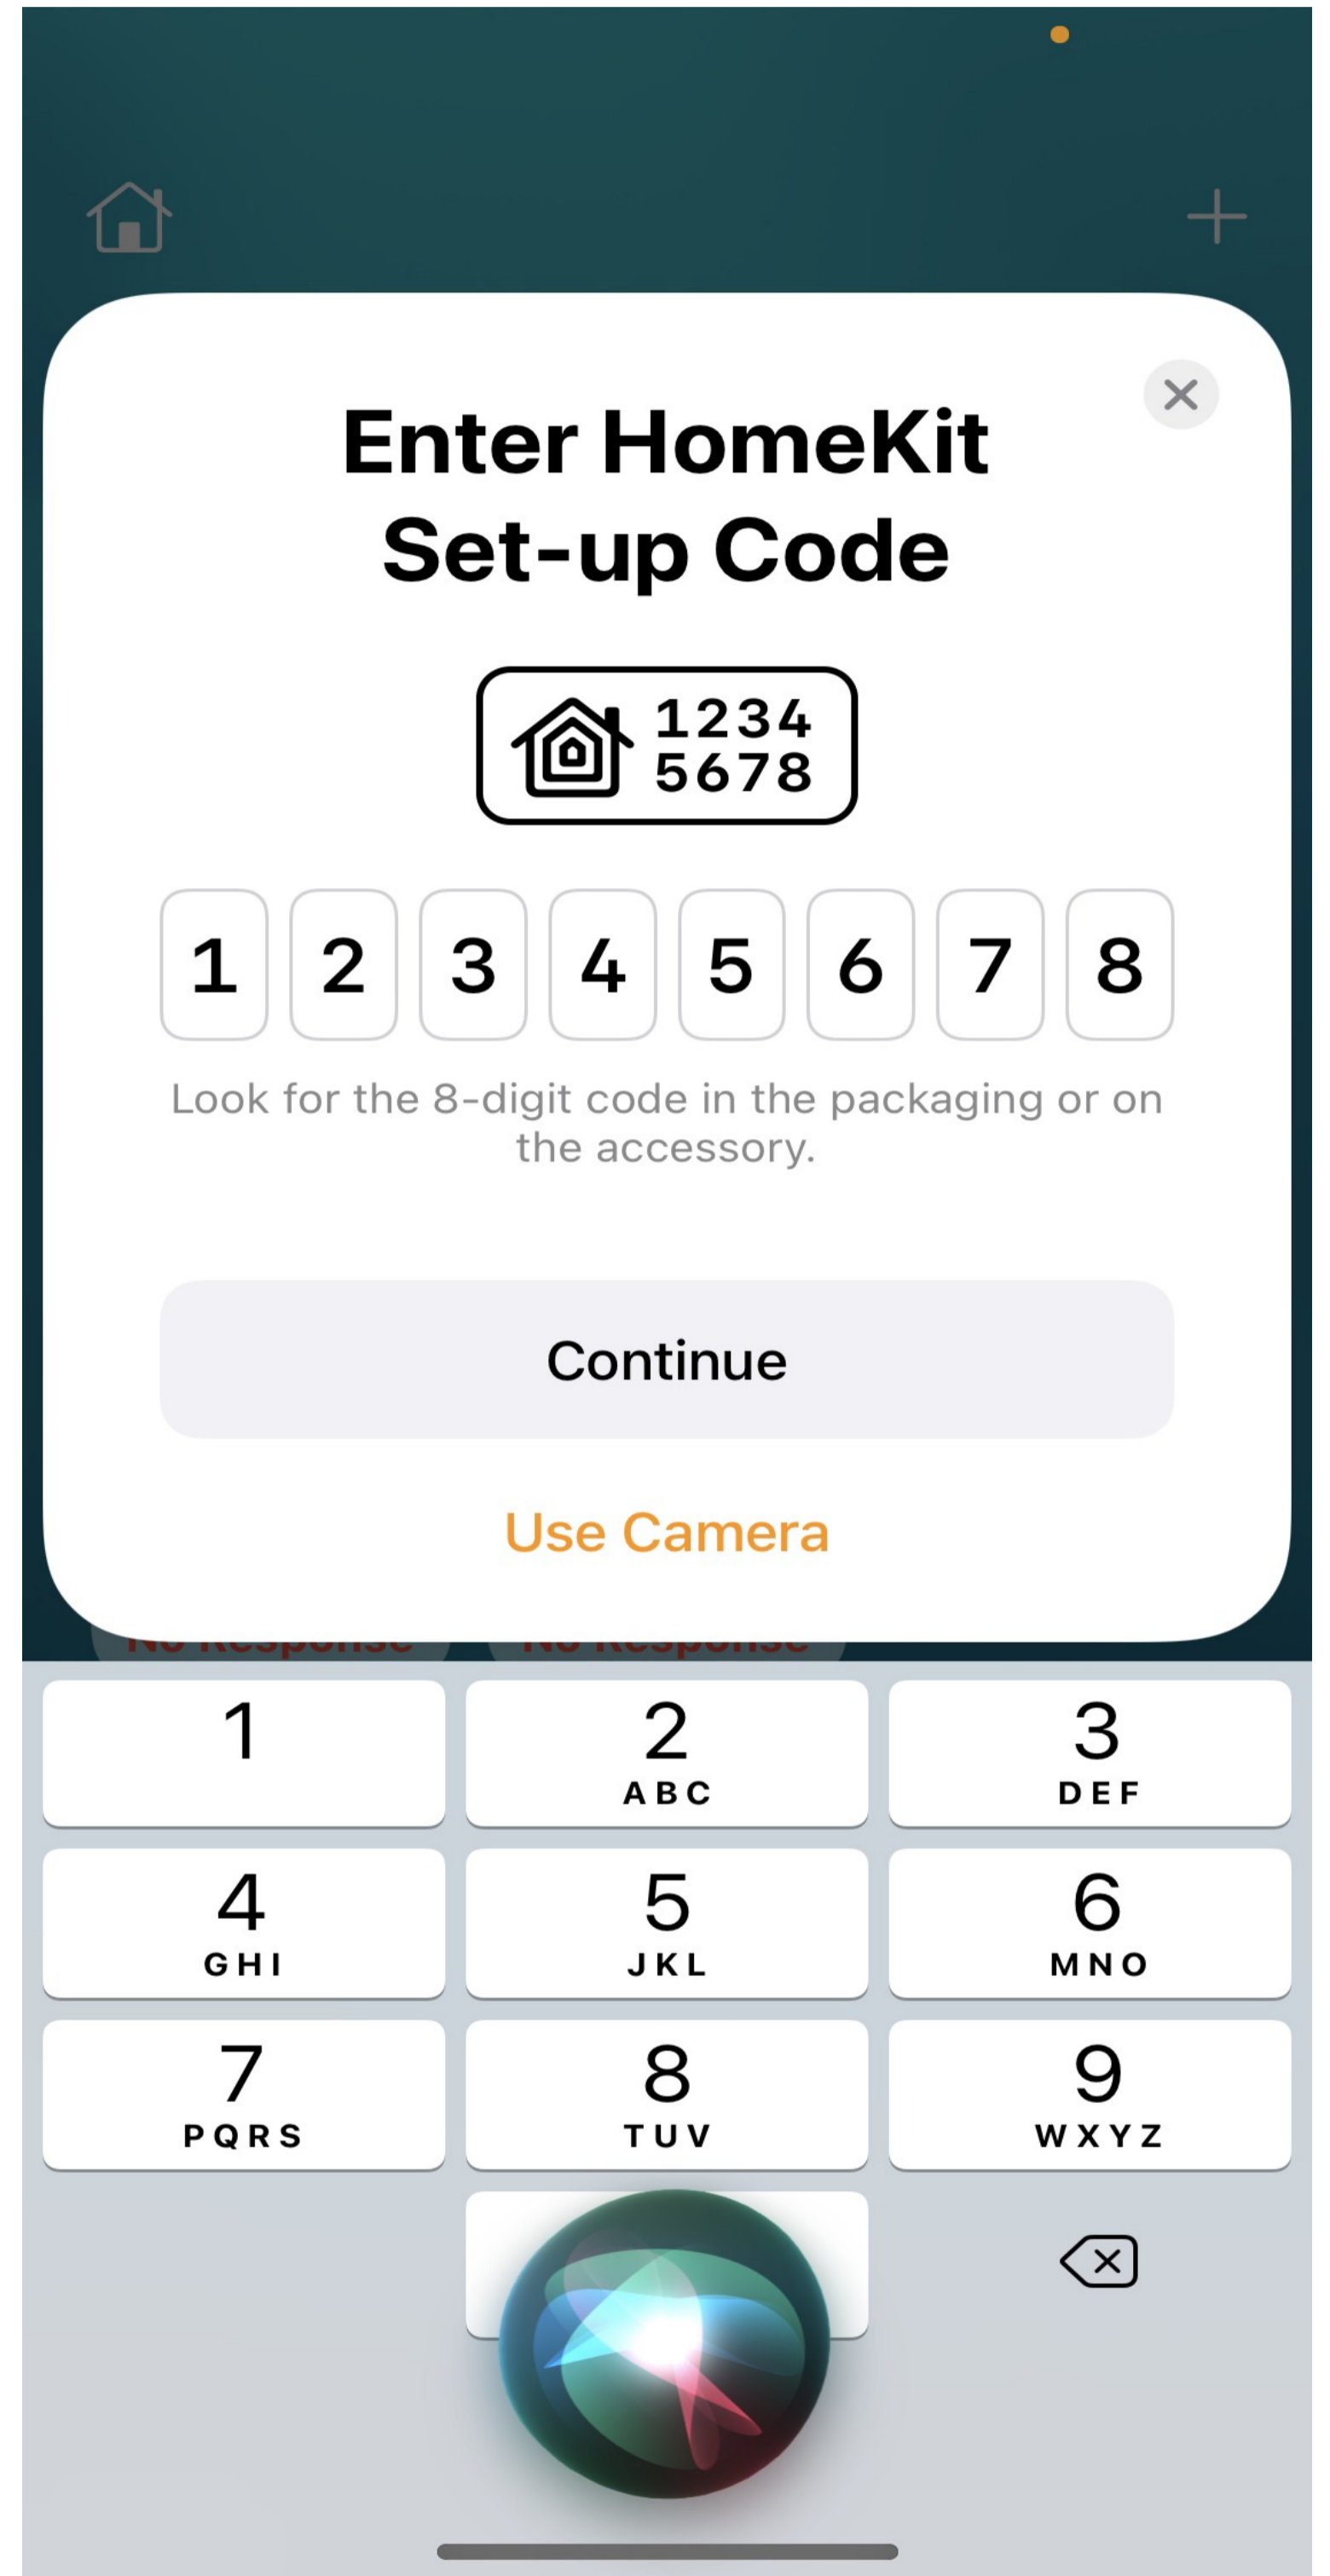No Response

Favourite Accessories

Bedroom SW1

Garage Opener

test garage

Select an Accessory to Add to My Home

Make sure your accessory is powered on and nearby.

WS04-5F4C

My Accessory Isn't Shown Here

Enter HomeKit Set-up Code

1234 5678

1 2 3 4 5 6 7 8

Look for the 8-digit code in the packaging or on the accessory.

Continue

Use Camera

1	2 ABC	3 DEF
4 GHI	5 JKL	6 MNO
7 PQRS	8 TUV	9 WXYZ

Select "more options" to get this screen

Enter pairing code manually

My Home

3 Accessories
No Response

Favourite Accessories

Bedroom
SW1
No Response

Garage
Opener
Closed

test garage
Closed

Connecting to Switch

This may take a few minutes.

My Home

3 Accessories
No Response

Favourite Accessories

Bedroom
SW1
No Response

Garage
Opener
Closed

test garage
Closed

Switch Location

Bedroom
Garage
Lounge Room (Suggested)
Dining Room (Suggested)

Continue

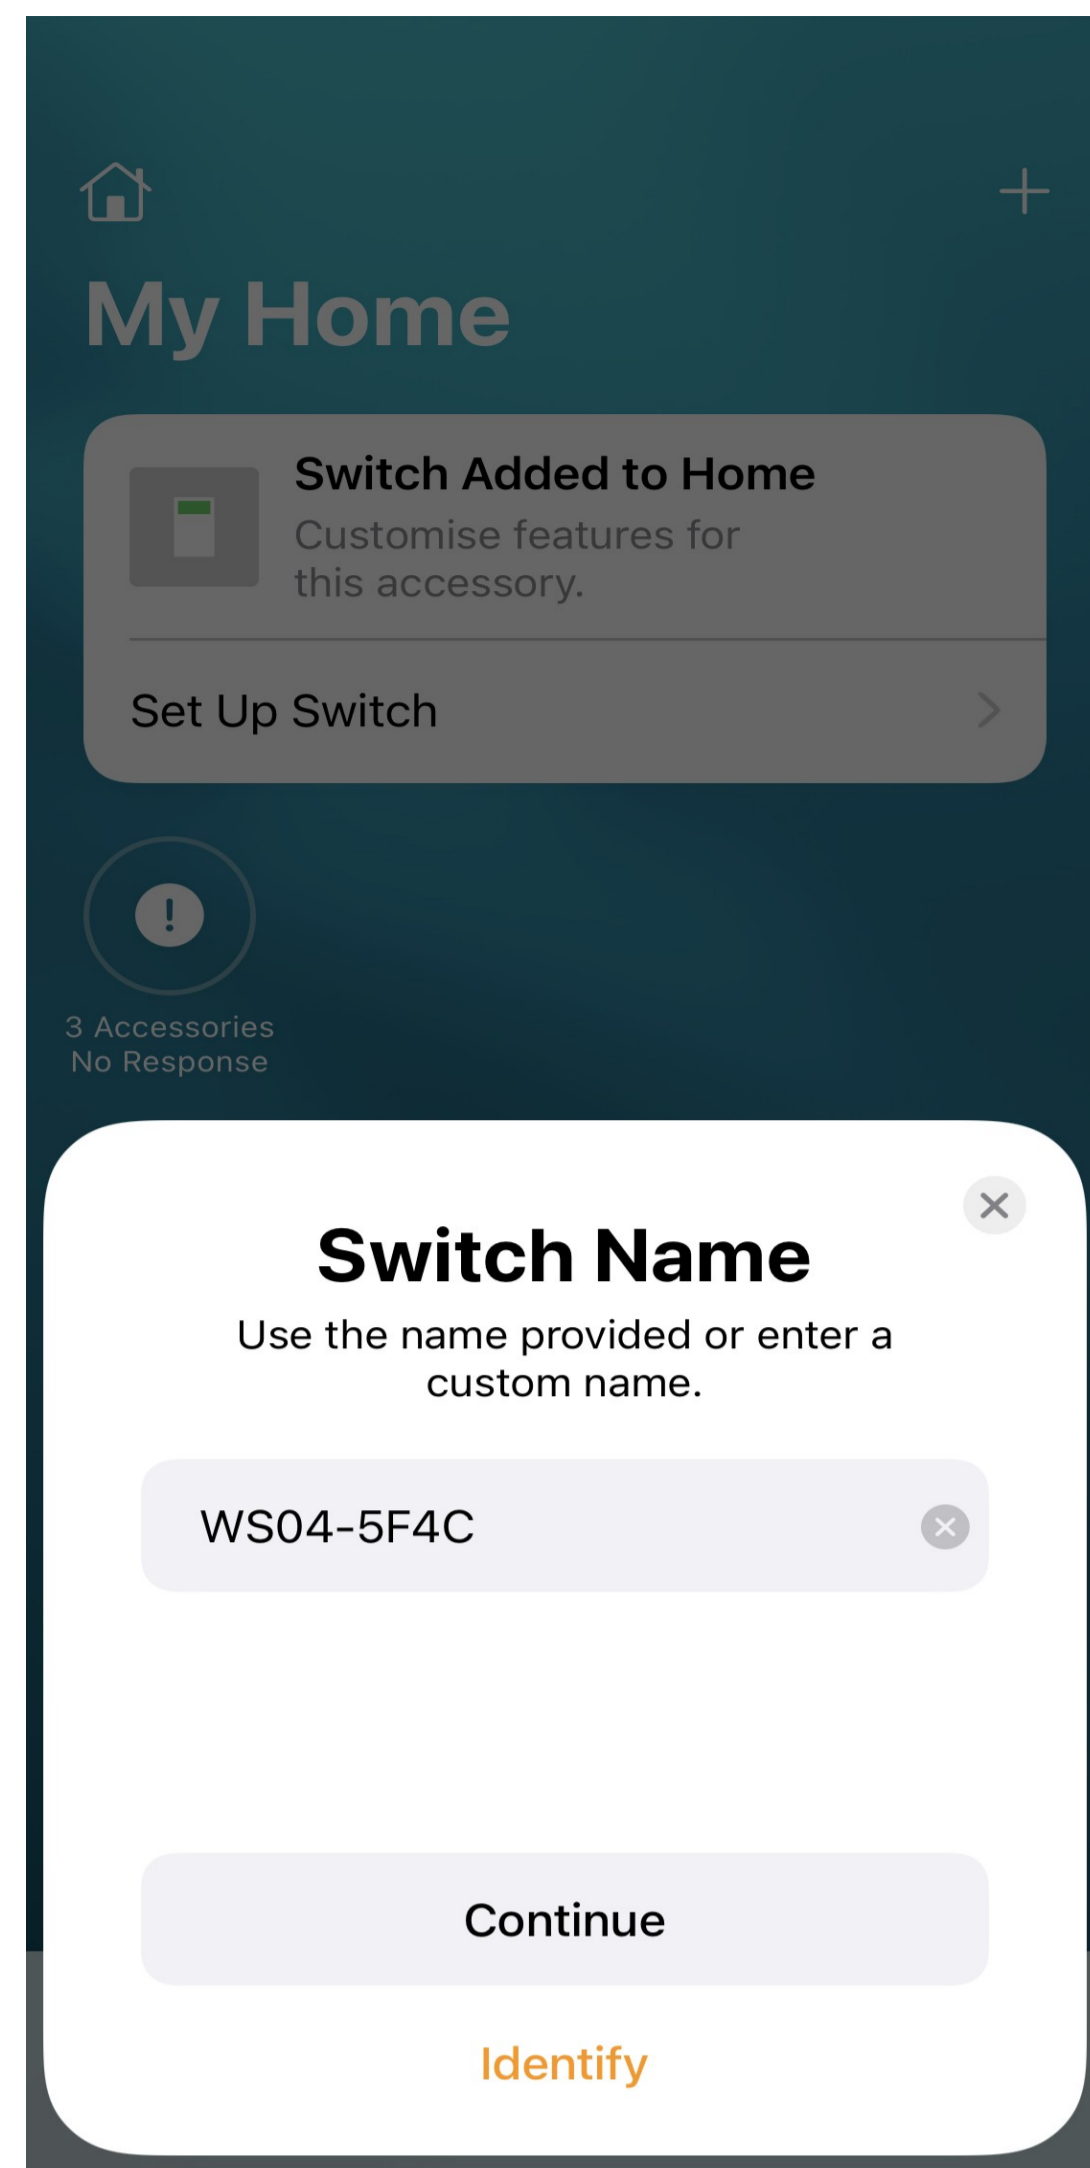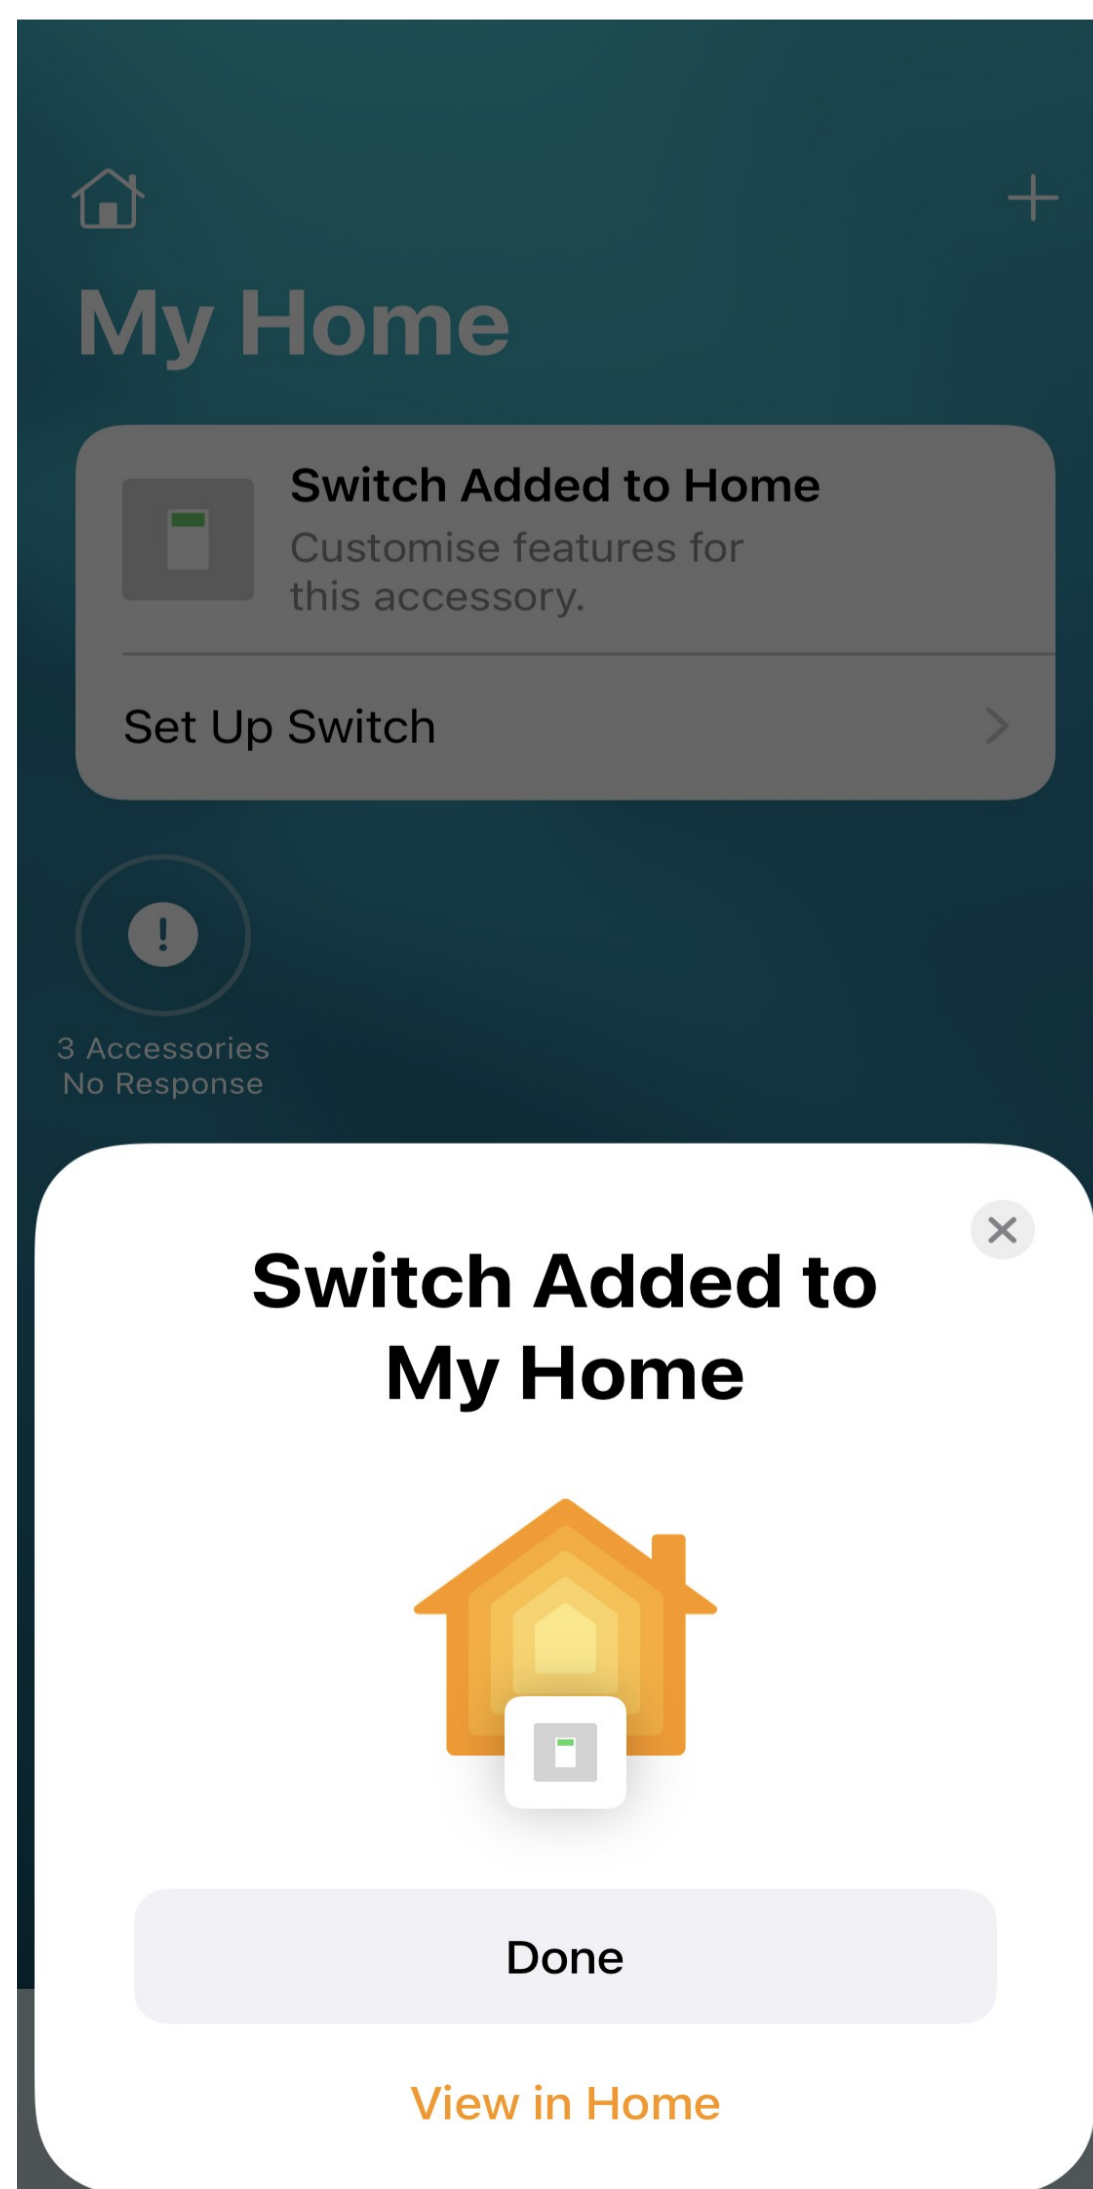**Identify**

Select which room to add accessory to
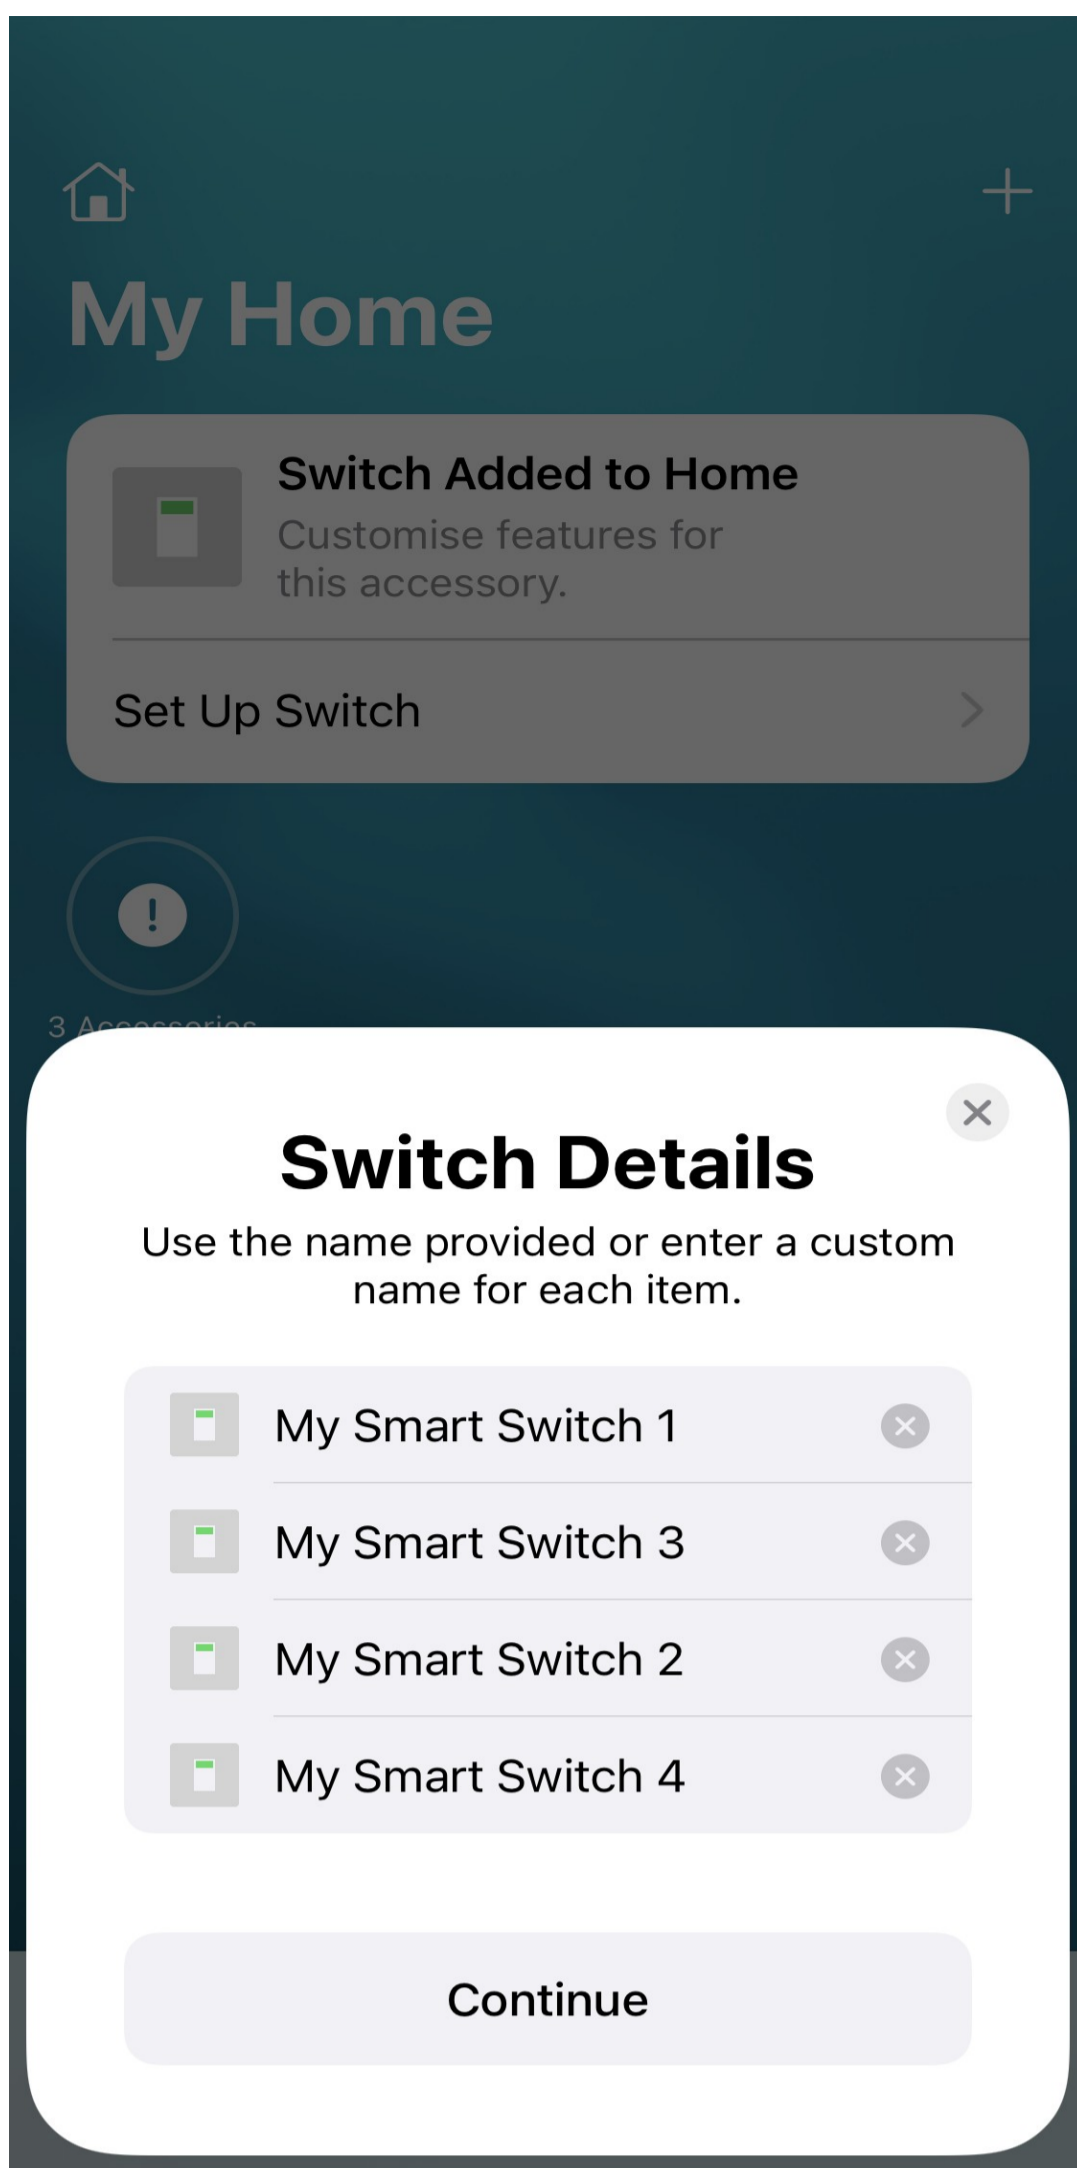
Assign names to the different appliances connected to the switch (i.e. fan, light etc)

Assign name to the switch when it shows in the home App.

Congratulations you are done..

How to clear the settings?

For switches

Press any touch button and hold for about 10 seconds.
Note: Please note that for multi gang switches only needs once clearing.

For Fan controller and Dimmer(black back)

Press the centre button 5 times quickly and then hold it for 5 more seconds till the three buttons start flashing quickly, also you will notice that your fan or light will turn on/off three times in a row.

For Fan controller

Press the centre button middle (M) speed for 10 seconds or more, also you will notice that your fan or light will turn on/off three times in a row.

For Dimmer

Press the centre button for 10 seconds or more, also you will notice that your fan or light will turn on/off three times in a row.
Note: If the device is not discoverable after 15 minutes from power up. If the device is not viewable in the home app, please power cycle the unit in order to make it discoverable for pairing.

Specification:

-Rate Voltage: AC110V/AC220-Rated Frequency: 50Hz/60Hz-Self Power Consuming: 0.5W-Rated Power:-Neutral & Live Line Model: 2000W max power-Single Live Line Model (low power): 5-2000W/gang-Fan controller and Dimmer: <600W-Dimensions: 118mm X 72mm X 34mm